
Reno


INSTALLATION MANUAL

Fusion long handle

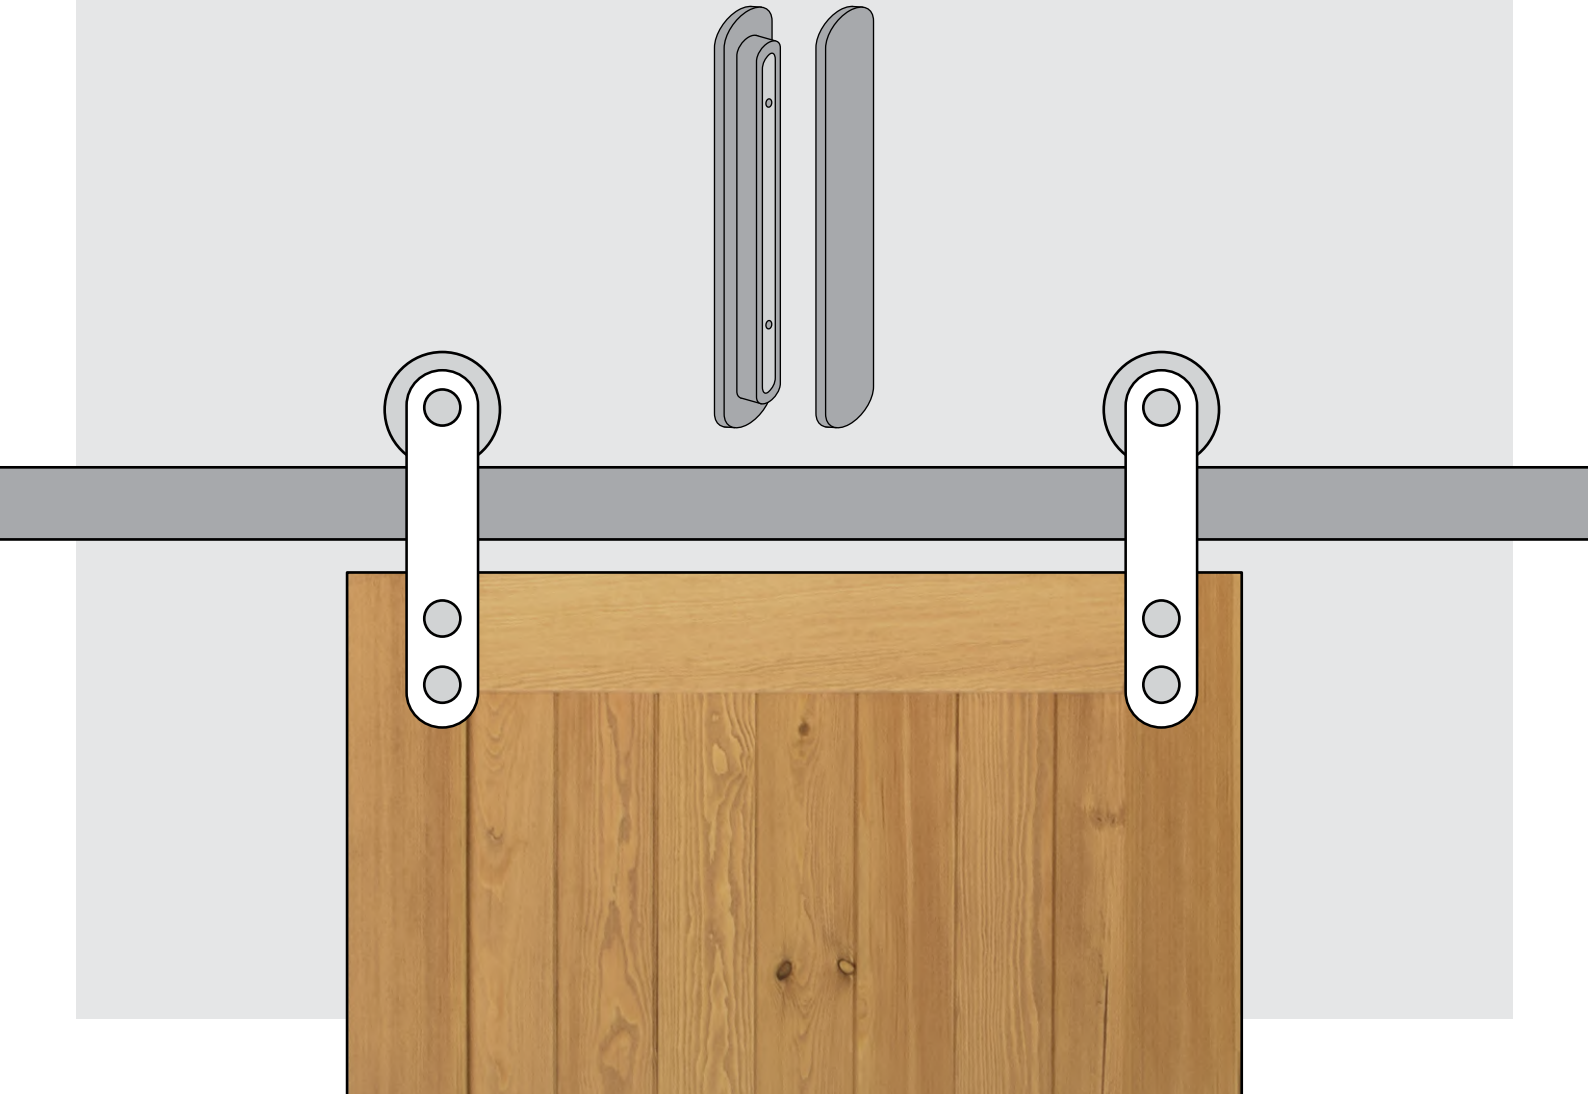

MAIN COMPONENTS


TOOLS NEEDED

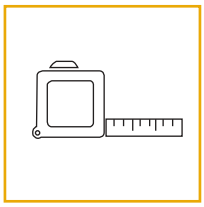

measuri
ng tape



pencil

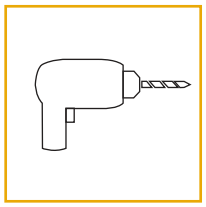


drill




screwdriver


INCLUDED PARTS

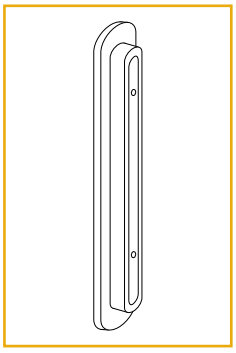


front part
of Fusion handle

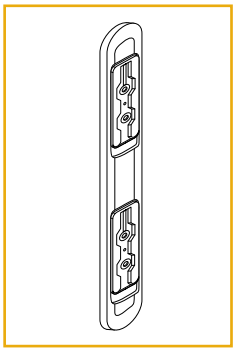


rear part
of Fusion handle

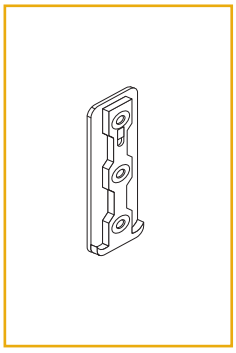

2 x connector

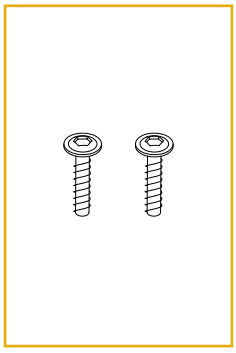

2 x
mounting
screw

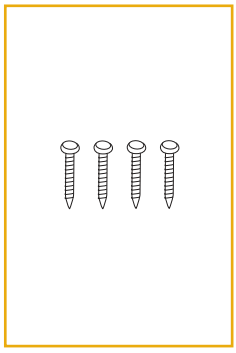

4 x small
screw


FUSION HANDLE INSTALLATION

1 MARK HOLE POSITIONS FOR HANDLE INSTALLATION

Place the connectors/fittings at the handle mounting location. Mark the mounting points for the central holes of the connector.




2 DRILL PILOT HOLES

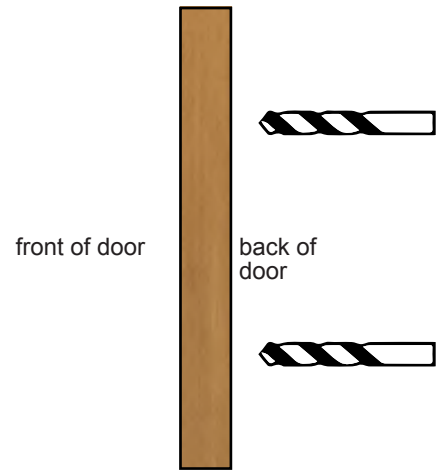

FUSION HANDLE INSTALLATION

3 INSTALL THE FRONT PART OF THE HANDLE


Screw the connectors and the front part of the handle using the included mounting screws. Make sure the connectors are parallel to the door edge, then secure them with auxiliary screws.

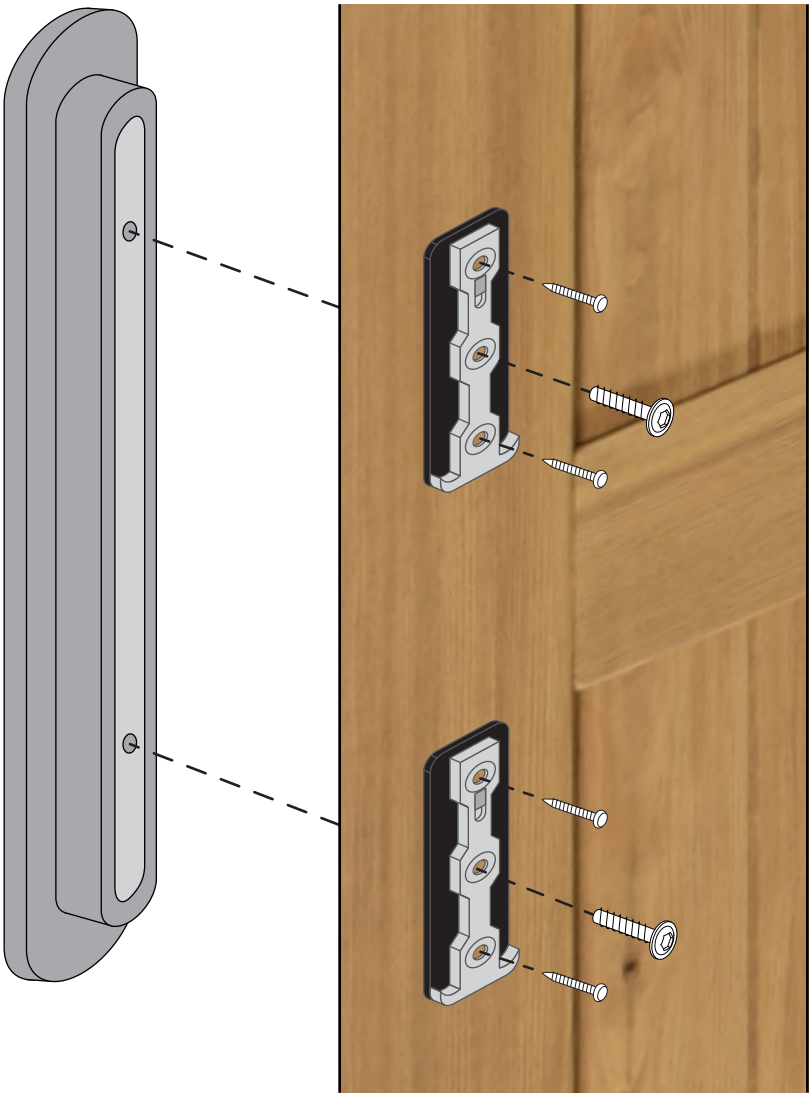

FUSION HANDLE INSTALLATION

4 INSTALL THE REAR PART OF THE HANDLE

Install the rear part of the handle by clicking it into the connector.

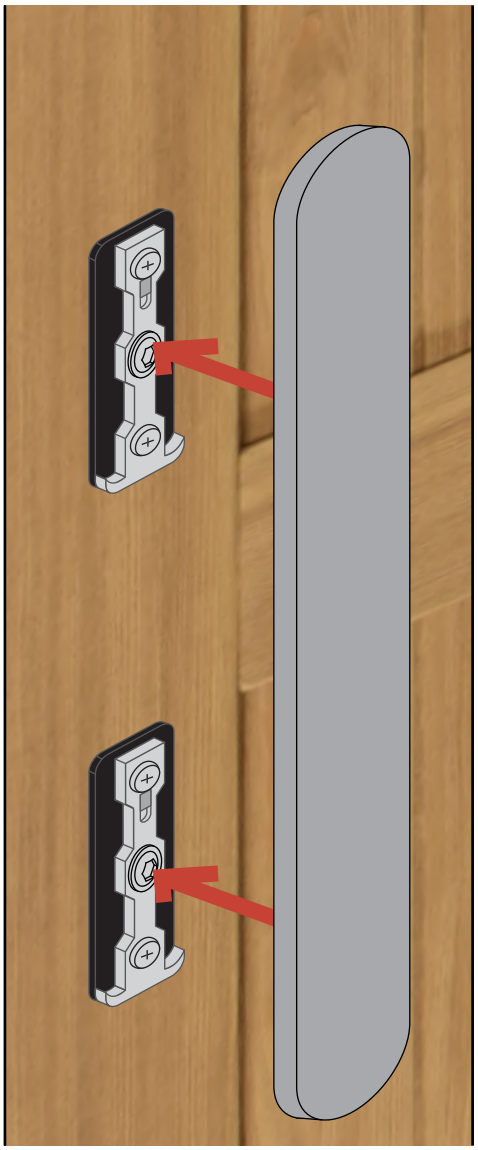





RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu