
Reno


INSTALLATION MANUAL

Fusion round handle

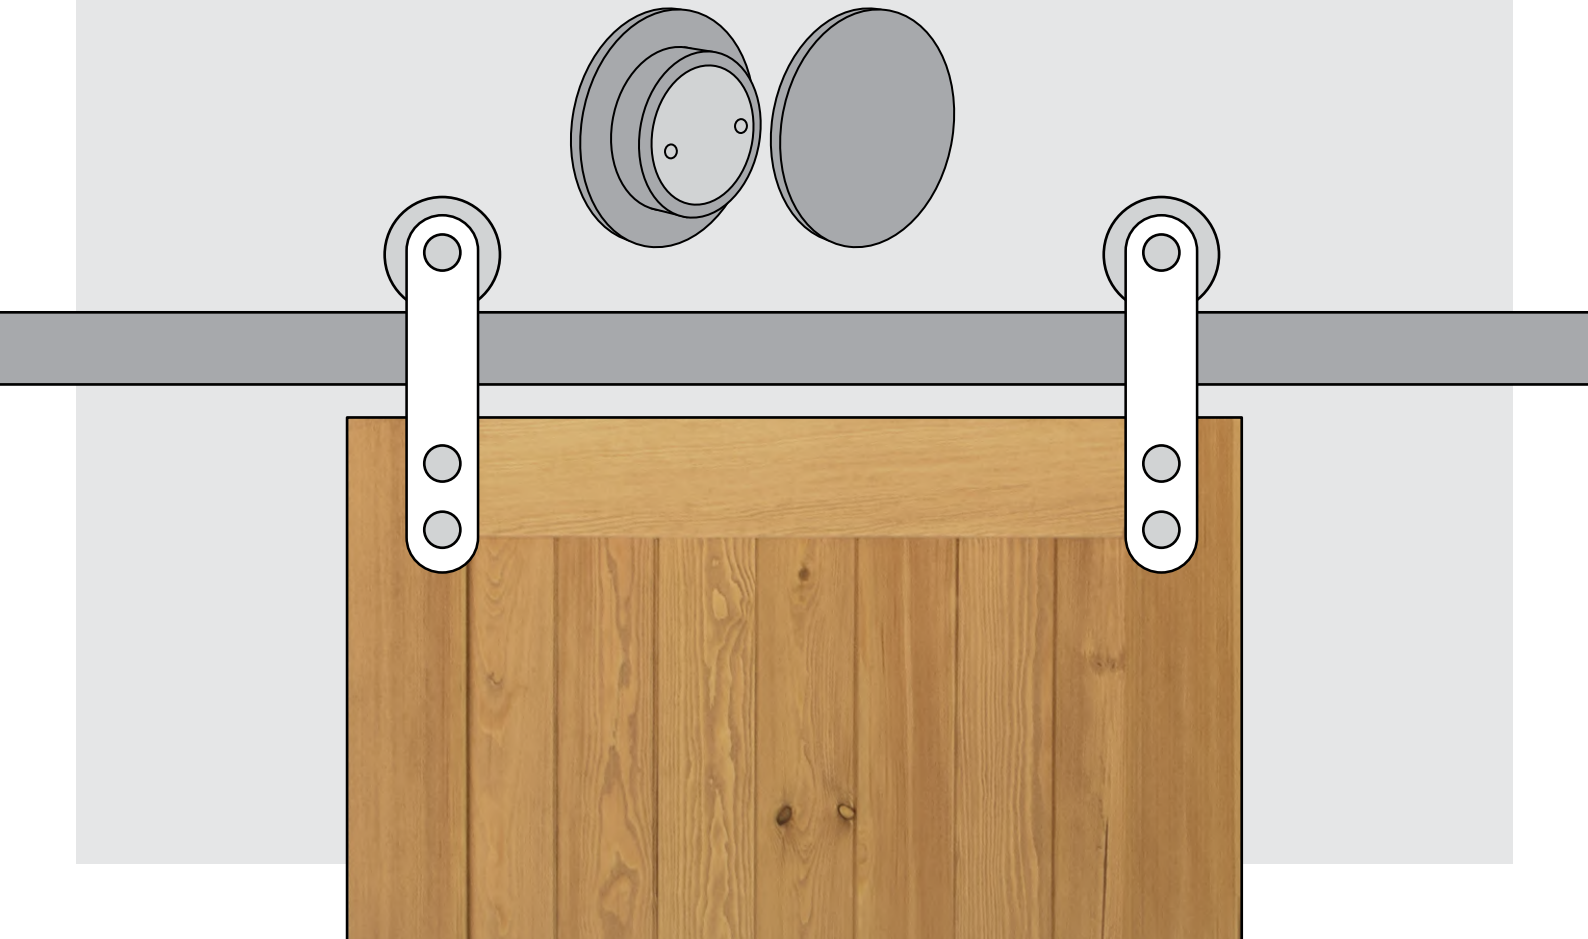

MAIN COMPONENTS


TOOLS NEEDED

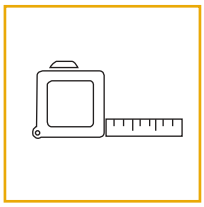

measuri
ng tape



pencil

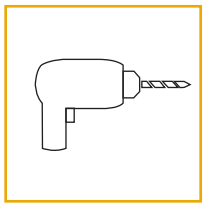


drill




screwdriver


INCLUDED PARTS

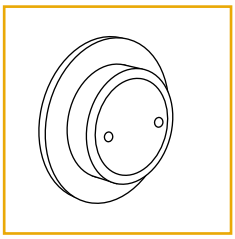


front part
of Fusion handle

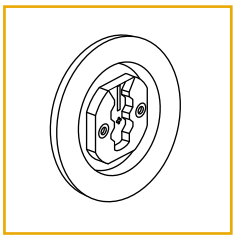

rear part
of Fusion handle

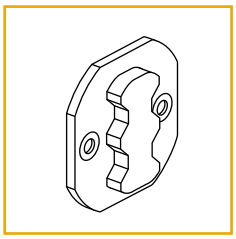

1 x connector

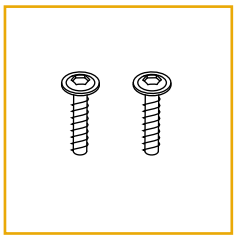


2 x screw

FUSION HANDLE INSTALLATION


1 MARK HOLE POSITIONS FOR HANDLE INSTALLATION

Place the connector/fitting at the handle mounting location. Mark the mounting points.

⚠ Make sure the connector is oriented correctly (the screw holes are in a horizontal line).

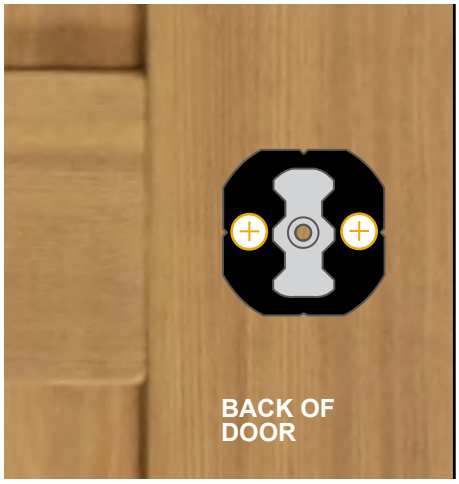


2 DRILL PILOT HOLES

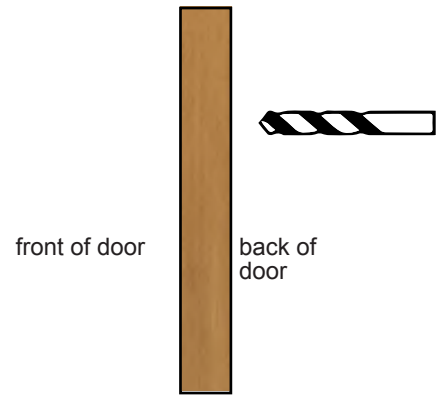

3 INSTALL THE FRONT PART OF THE HANDLE


Screw the connector and the front part of the handle using the included screws.

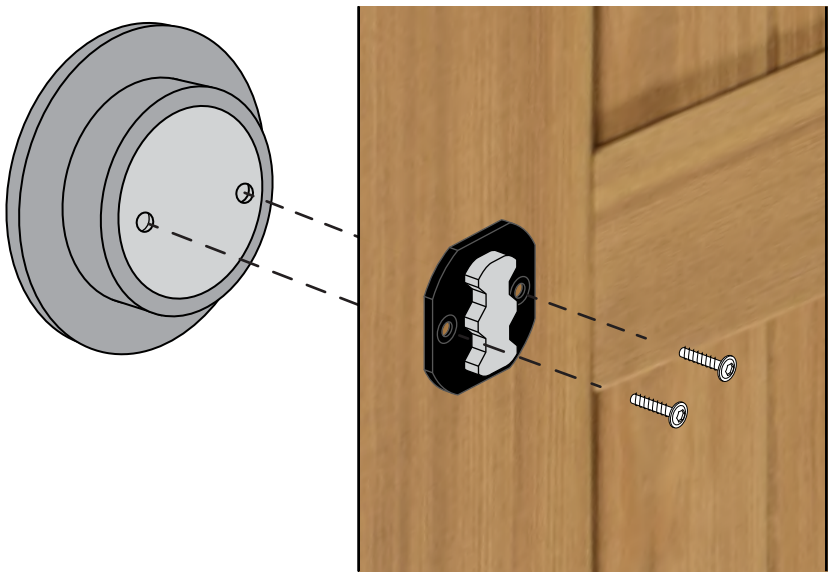


FUSION HANDLE INSTALLATION

4 INSTALL THE REAR PART OF THE HANDLE

Install the rear part of the handle by clicking it into the connector.

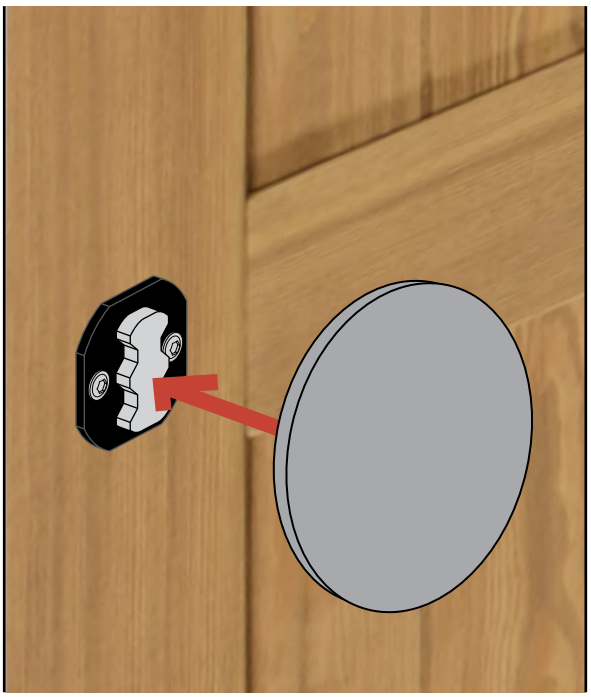

Before installing the handle, you can remove/break off the plastic element that is located on the connector on the inside of the handle (marked in red).
This will allow for easy removal of the handle by sliding it out of the connector.

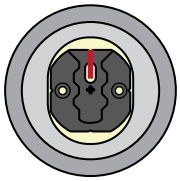





RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu