
Reno


INSTALLATION MANUAL

Elka Handle

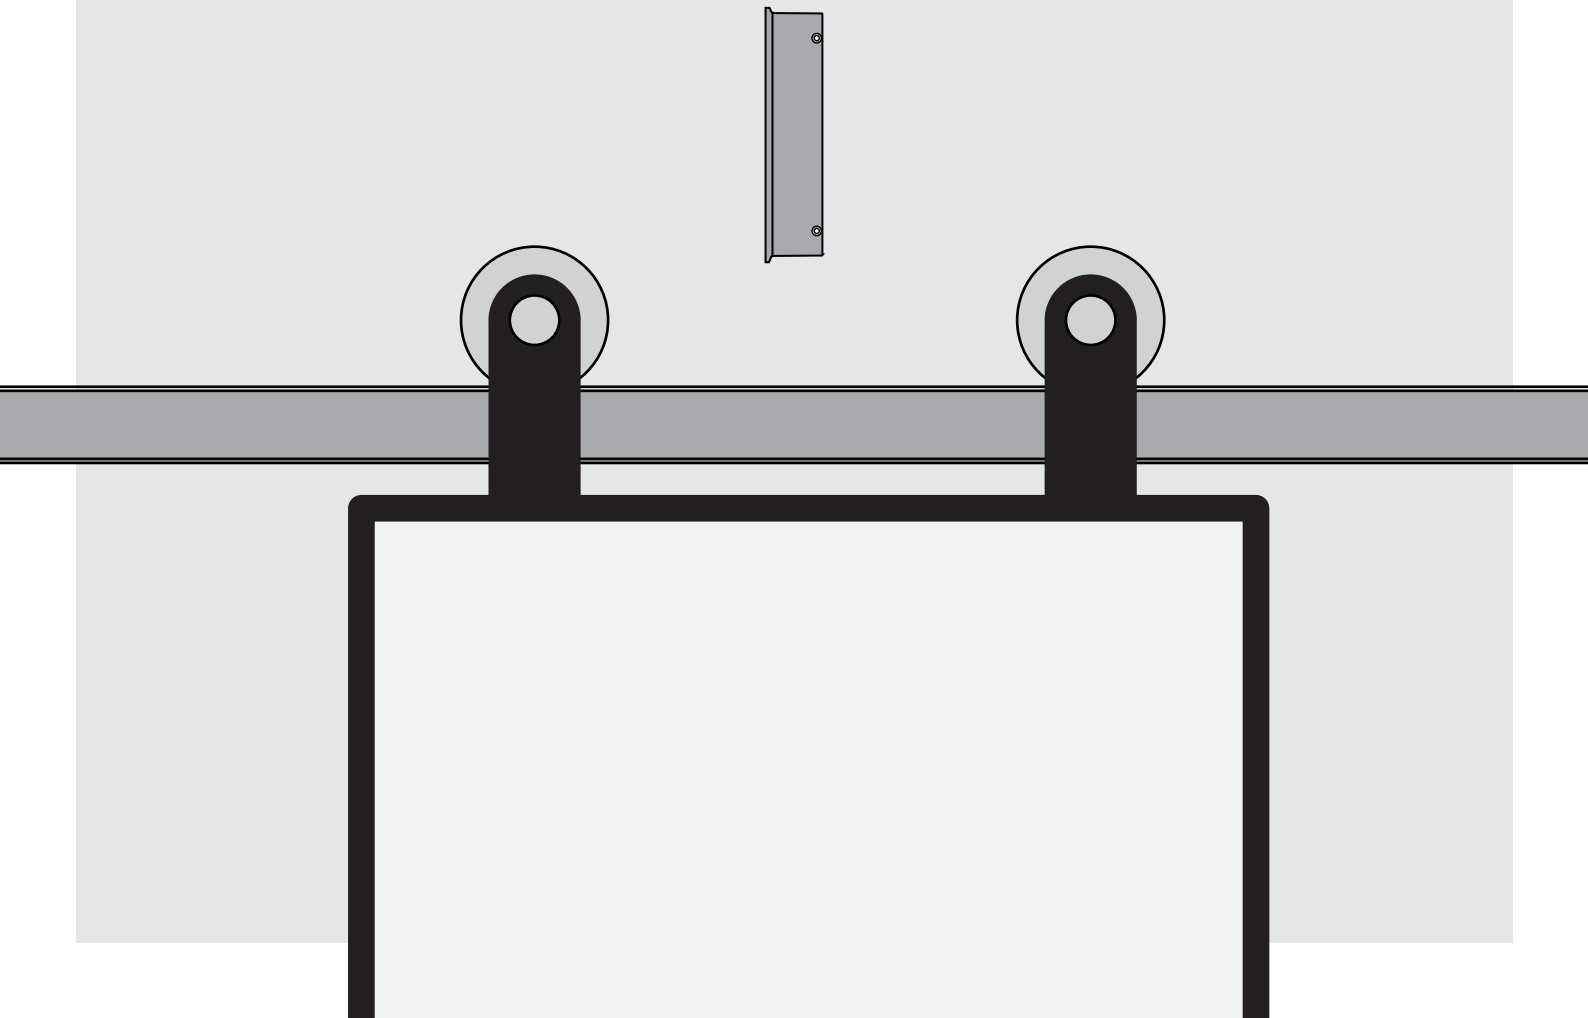


MAIN COMPONENTS

TOOLS NEEDED

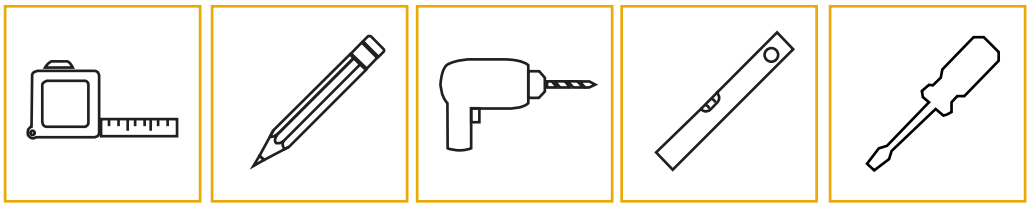

measuri
ng tape | pencil | drill | spirit level | screwdriver

INCLUDED PARTS

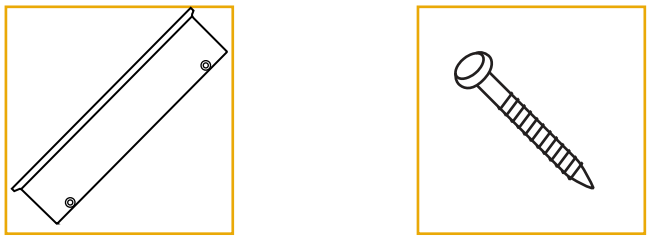


1x handle | 2x screw

ELKA HANDLE INSTALLATION

1 FLAT MOUNTING - FRONT OR BACK OF DOOR

⚠


Before screwing screws, drill 0.3 cm pilot holes to reduce the risk of wood splitting.

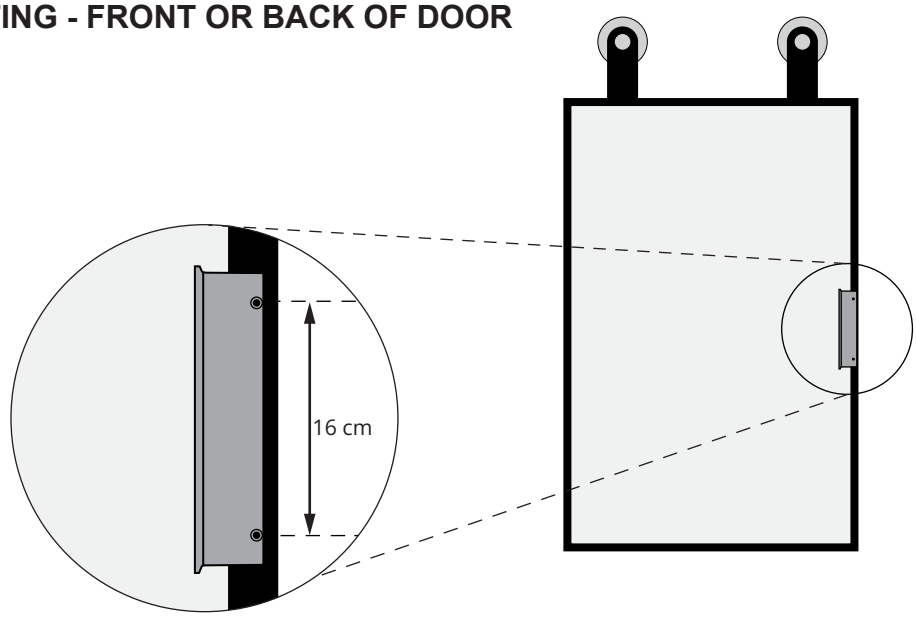

2 SIDE MOUNTING - ON THE SIDE EDGE OF THE DOOR

⚠

Before screwing screws, drill 0.3 cm pilot holes to reduce the risk of wood splitting.

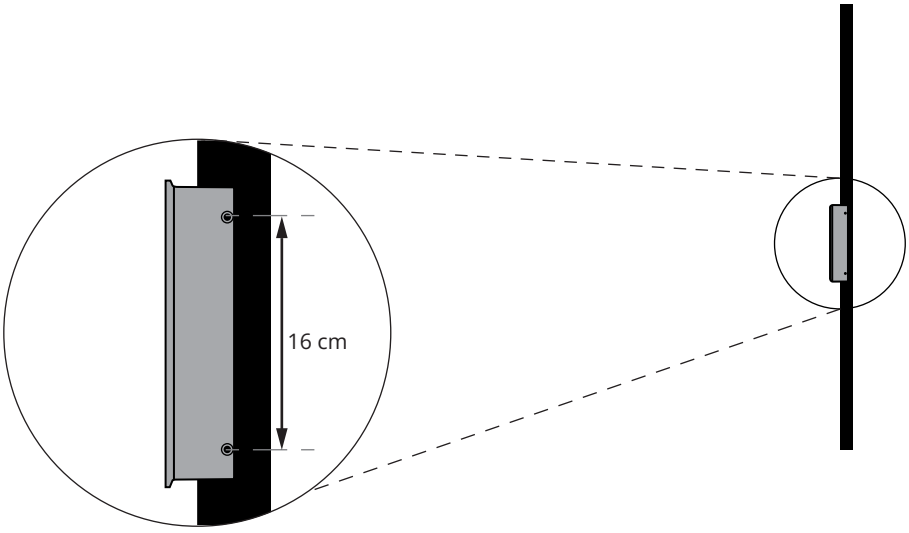



RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu