
Reno


INSTALLATION MANUAL

Inner Handle

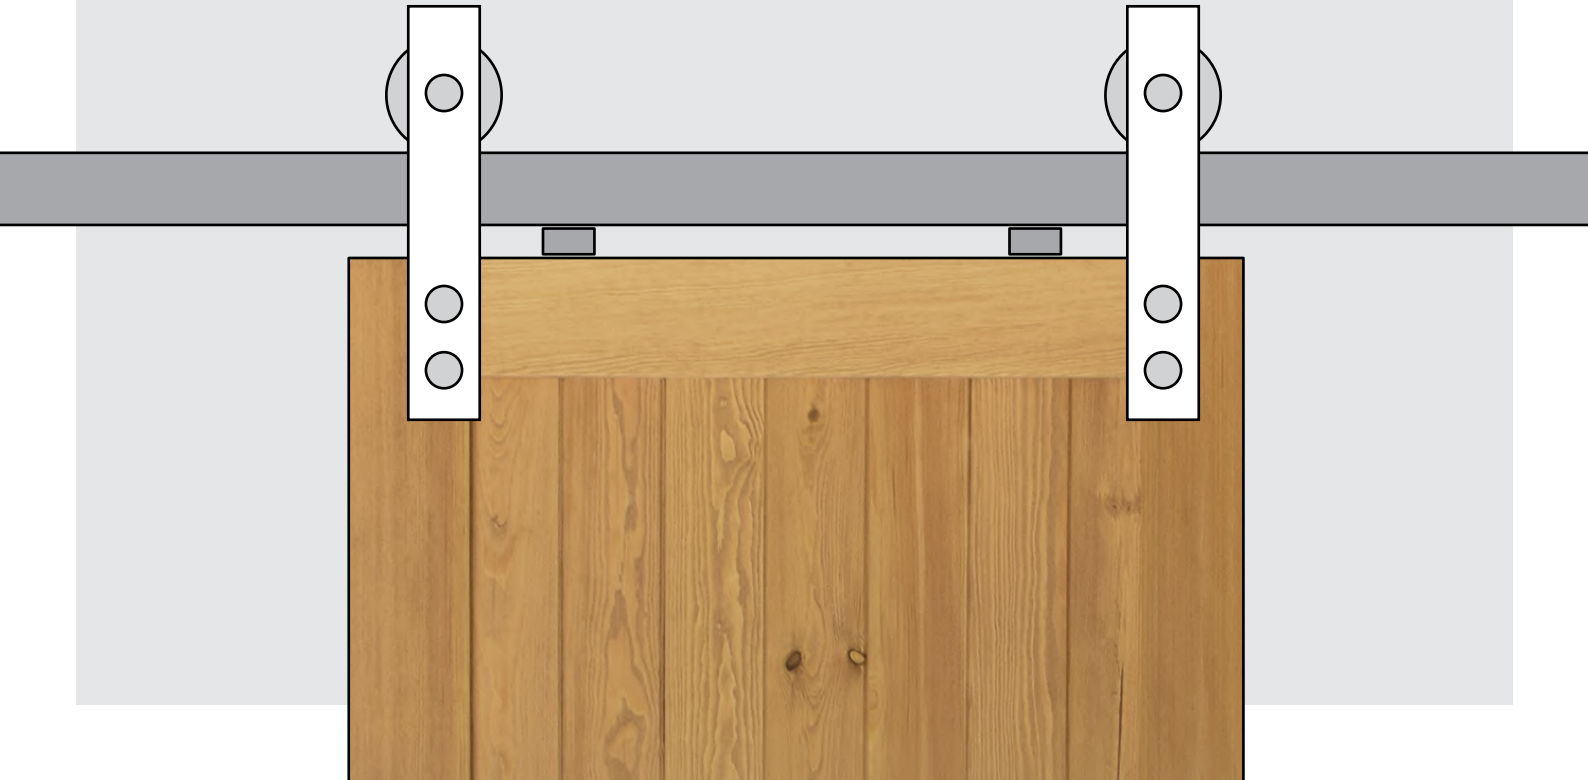


MAIN COMPONENTS

TOOLS NEEDED

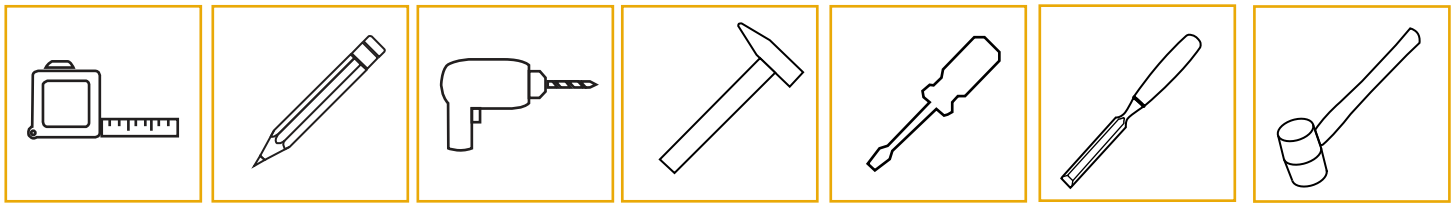


measuring tape | pencil | drill | hammer | screwdriver | chisel | rubber mallet

INCLUDED PARTS

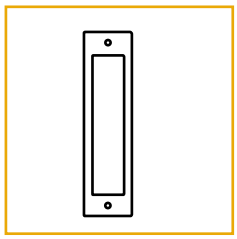

1x handle

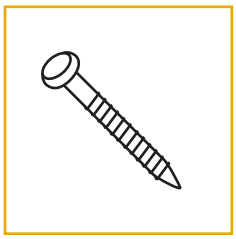


2x screw

INNER HANDLE INSTALLATION


1 MARK HANDLE MOUNTING LOCATION

Using a tape measure and pencil, mark the handle's mounting location. The INNER handle is mounted 4 cm from
the edge of the door (5 cm for doors with a metal frame).

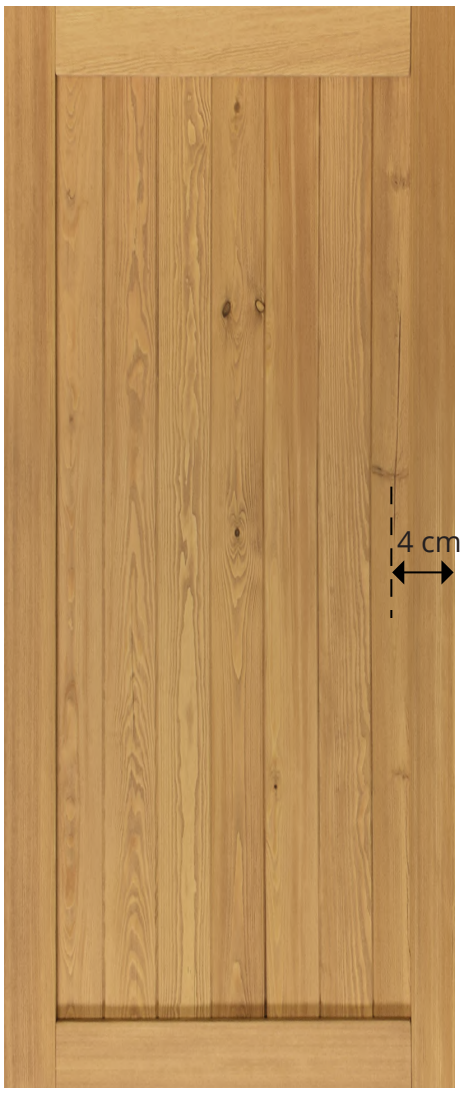


2 MARK CONTOUR

Place the handle against the door and use a pencil to mark the contour of the mounting hole, outlining the protruding rear part of the handle.

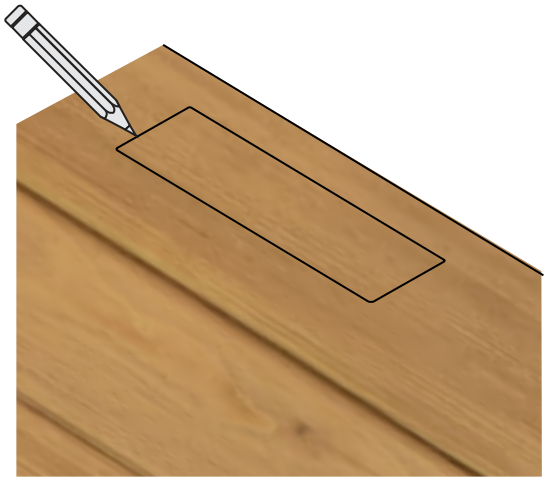

3 PREPARE MOUNTING HOLE

Using a hammer and chisel or a router, remove wood within the marked contour.

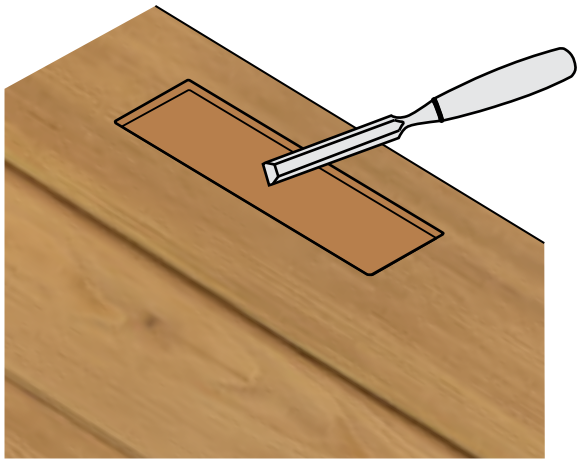

INNER HANDLE INSTALLATION


4 PLACE HANDLE IN HOLE

Using a rubber mallet, gently seat the handle inside the prepared mounting hole to check for fit. Adjust the depth and shape of the hole as needed. The handle should be tightly fitted, and its edge should lie flush with the door surface.



5 ATTACH HANDLE

Attach the handle to the door using the included screws.

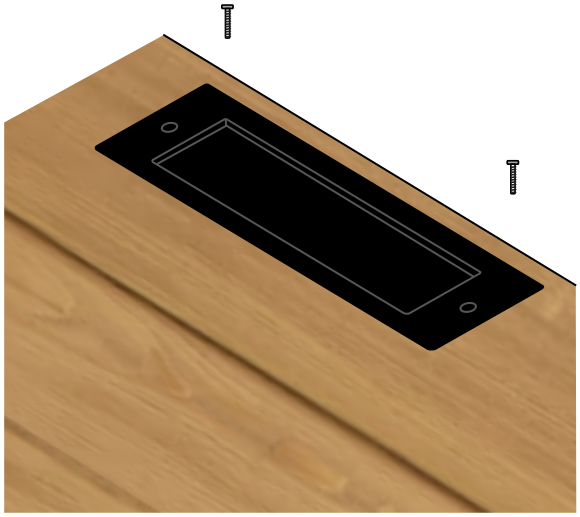

RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu