Reno

INSTALLATION MANUAL

Standard Classic

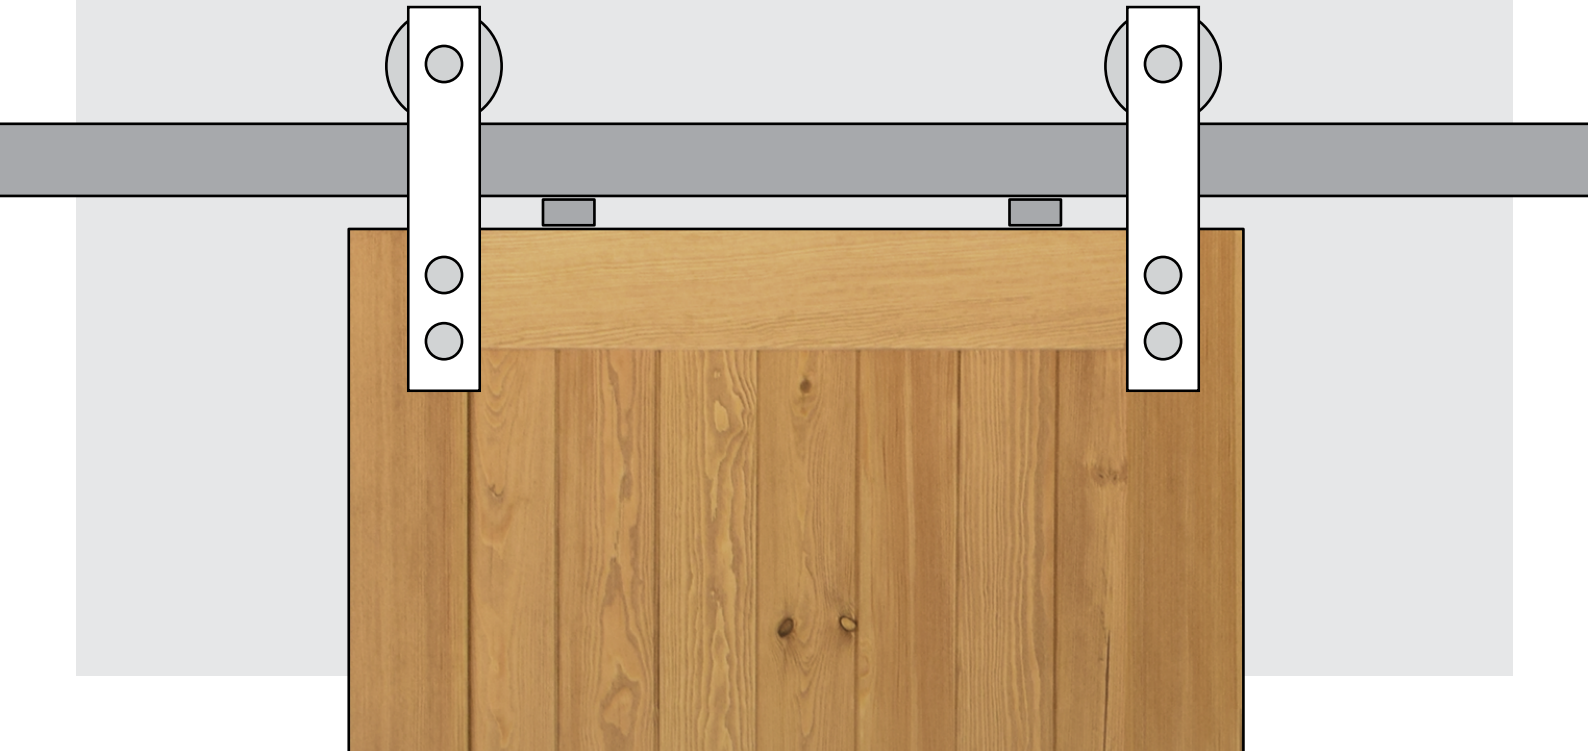

STRUCTURAL INFORMATION

For standard systems for single and double doors

1 All Reno sliding systems require mounting into structural material to a depth of at least 6 cm. The wall or structures where the system will be mounted must be designed to support the specified weight for the system.

SYSTEM	DOOR WEIGHT LIMIT
Standard Classic	up to 75 kg

2 Ensure that the doors to be installed are made of solid structural material in the areas where hangers, bottom guide, and handles (if used) are mounted.

3 Contact your contractor and/or local building authorities to confirm compliance with local building codes.

4 For best results and to ensure full compliance with local building codes, seek qualified construction professionals with knowledge of structural material properties and building conditions.

MAIN COMPONENTS

TOOLS NEEDED

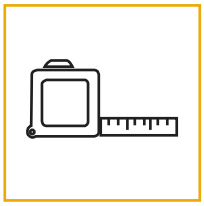
measuri
ng tape

pencil

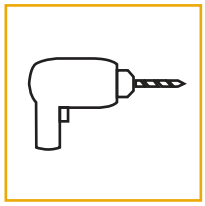
drill

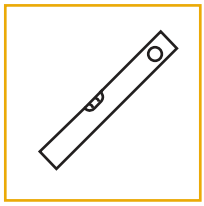
spirit level

socket wrench
ratchet

wrench

recommended
2 people

INCLUDED PARTS

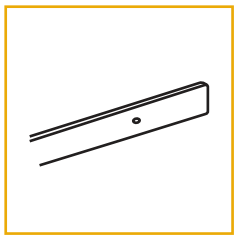
1 x track
200 cm

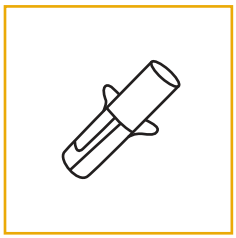
5 x dowel

5 x screw

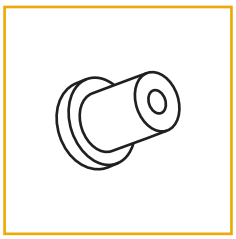
5 x spacer sleeve

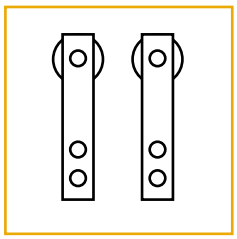
2 x hangers

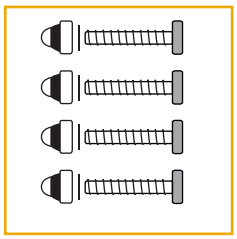
set of screws for
hanger mounting

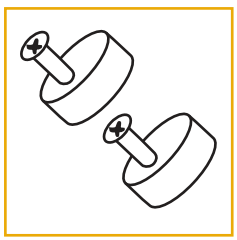
2 x anti-jump
device

1 x bottom guide T

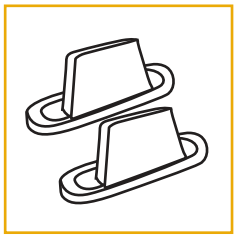
1 x bottom guide U
(optional)

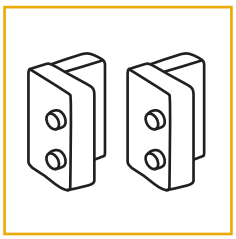
2 x stopper

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

1 DETERMINE TRACK POSITION

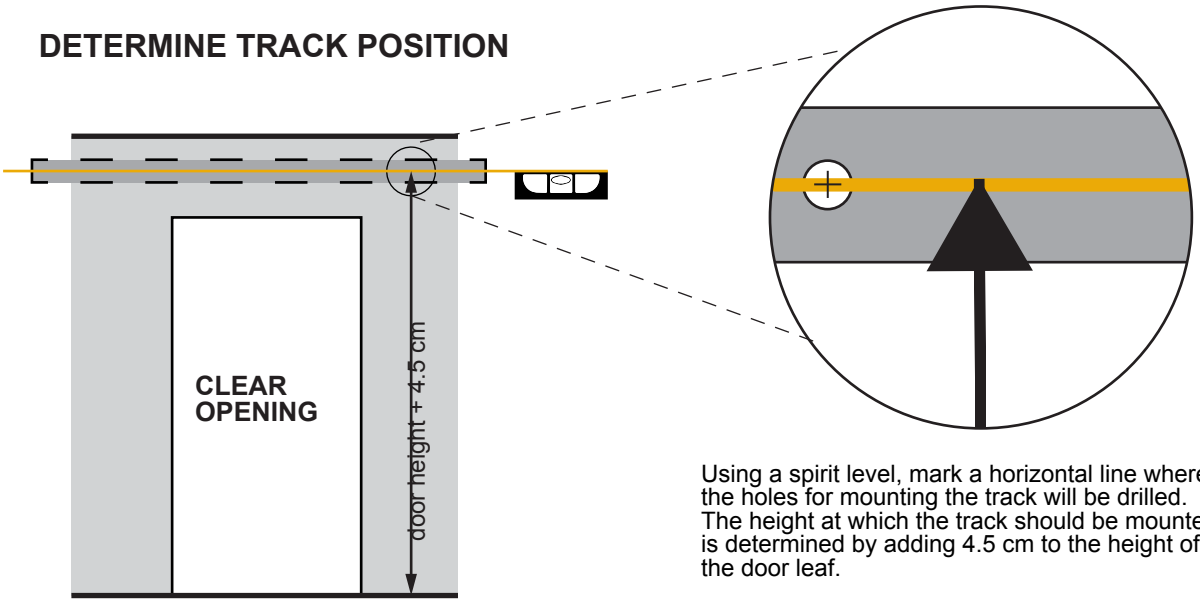

Using a spirit level, mark a horizontal line where the holes for mounting the track will be drilled. The height at which the track should be mounted is determined by adding 4.5 cm to the height of the door leaf.

2 LOCATE MOUNTING POINTS - SINGLE DOOR

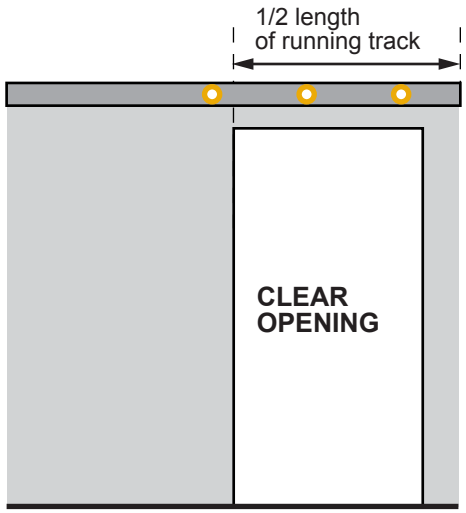

3 LOCATE MOUNTING POINTS - DOUBLE DOOR

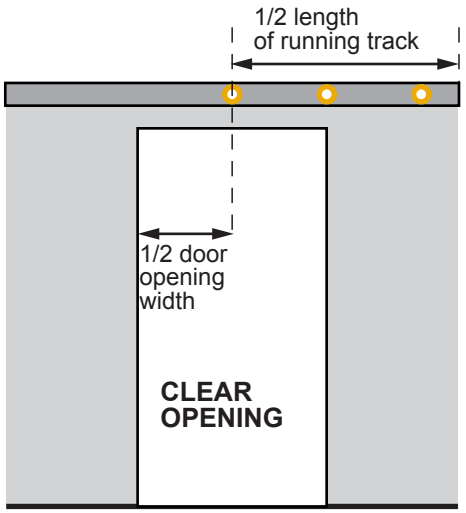

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

4 PLACE STOPPERS ON TRACK

Slide both stoppers onto the track from both ends. Move them inwards so that they are behind the outermost mounting holes of the rail. Lightly tighten them so they do not move during track installation. The final position of the stoppers will only be set after the door is mounted.

5 ATTACH TRACK TO WALL

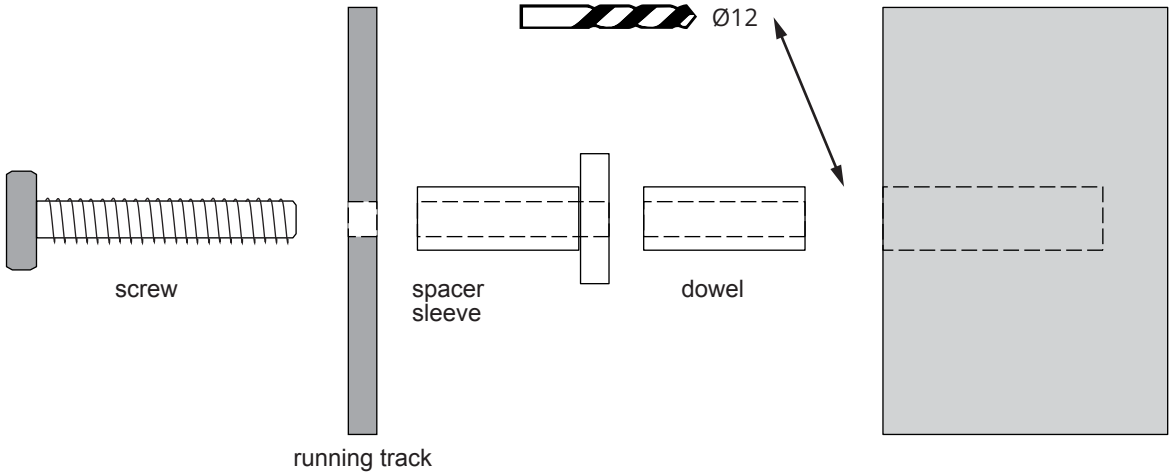

HANGER INSTALLATION

* If the door does not have pre-drilled holes, mark and drill them according to the instructions below. If the holes are already ready, proceed directly to hanger installation.

6 MARK HOLE POSITIONS FOR HANGER INSTALLATION

Ensure that the Classic hangers are screwed parallel to the side edge of the door. Inaccurate mounting will cause the door leaf to deviate from vertical, which may result in a visible gap (clearance) between the door and the wall in the closed position.

7 DRILL HOLES

To achieve clean edges without chipping, use a wooden backing block, pressing it firmly against the back of the door while drilling.

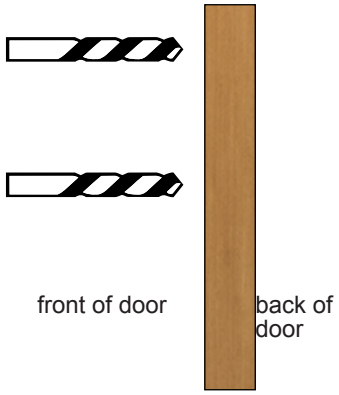

8 MOUNT HANGERS

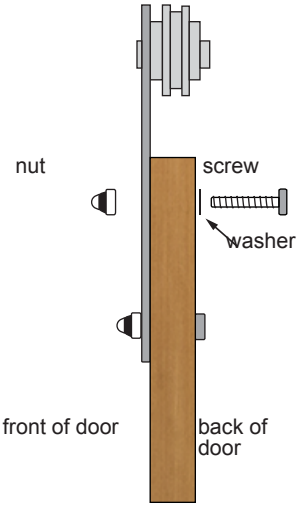

DOOR INSTALLATION

9 HANG THE DOOR ON THE TRACK

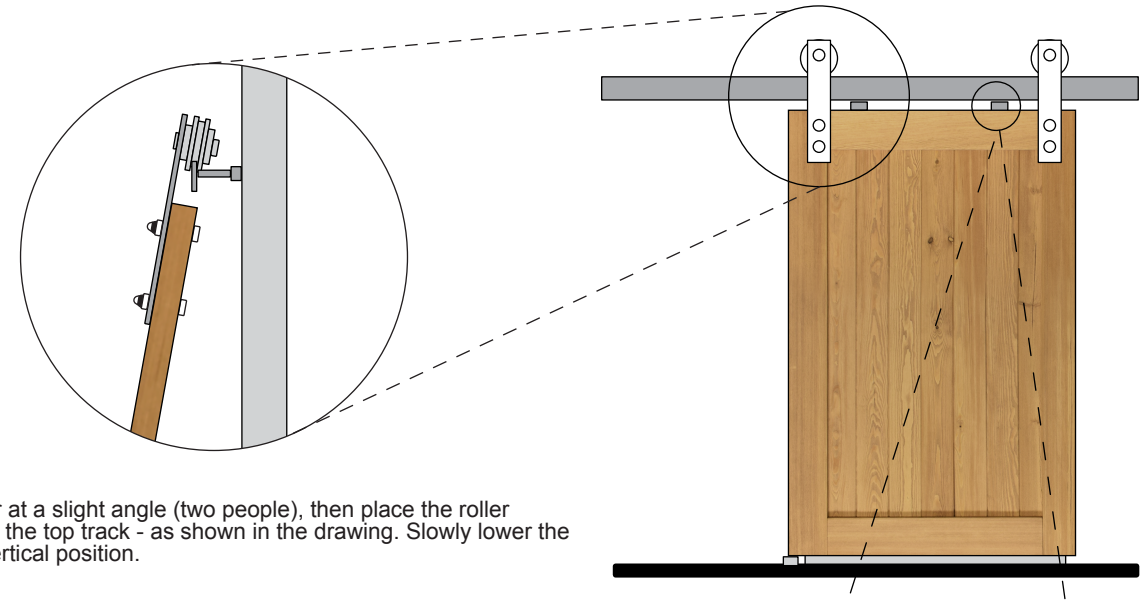

Lift the door at a slight angle (two people), then place the roller recess onto the top track - as shown in the drawing. Slowly lower the door to a vertical position.

10 MOUNT ANTI-JUMP DEVICE

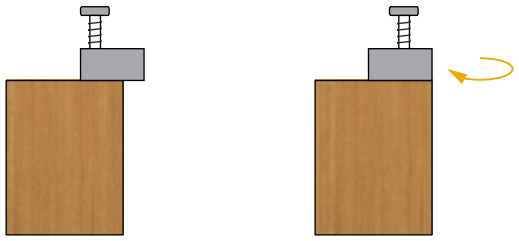

BEFORE HANGING THE DOOR

Attach anti-jump devices close to the hangers or directly behind them (no more than 10 cm from the hangers).

AFTER HANGING THE DOOR

After hanging the door, rotate the anti-jump devices so that they do not protrude beyond the door.

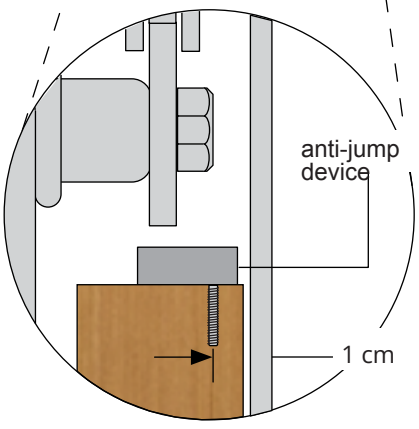

INSTALLATION OF BOTTOM GUIDE AND DOOR STOPPERS

11 INSTALL THE BOTTOM GUIDE AND SET THE STOPPERS

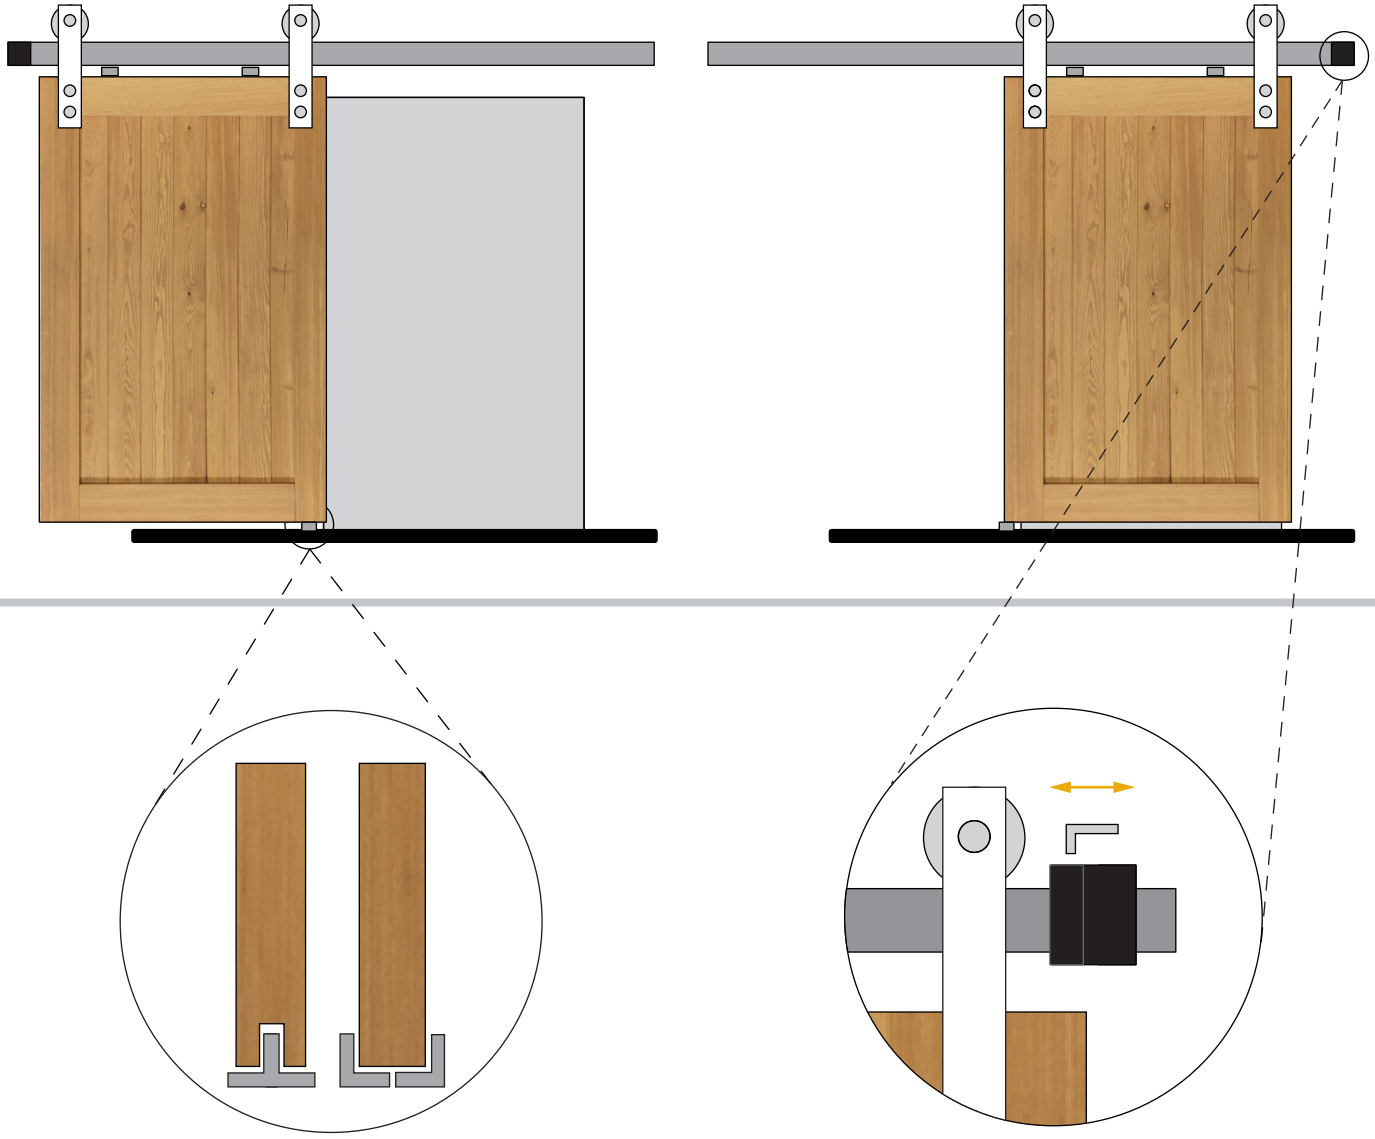

Mount the bottom guide close to the edge of the door opening (approx. 0-1 cm from the edge), so that when the door is fully open or closed, the bottom guide will always be in line with the door.

Move the door to the fully closed position and push the stopper against the hanger. Tighten it firmly to the track using an Allen key.

Repeat for the fully open position.

RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu