
Reno

INSTALLATION MANUAL

Top Ceiling System - ceiling mounting - metal doors



STRUCTURAL INFORMATION

For Top systems for single-leaf and double-leaf doors



1 All Reno sliding systems require mounting into structural material to a depth of at least 6 cm. The wall or structures where the system will be mounted must be designed to support the specified weight for the system.

SYSTEM	DOOR WEIGHT LIMIT
Top Ceiling	up to 120 kg


2 Ensure that the doors to be installed are made of solid structural material in the areas where hangers, bottom guide, and handles (if used) are mounted.

3 Contact your contractor and/or local building authorities to confirm compliance with local building codes.

4 For best results and to ensure full compliance with local building codes, seek qualified construction professionals with knowledge of structural material properties and building conditions.


MAIN COMPONENTS

TOOLS NEEDED

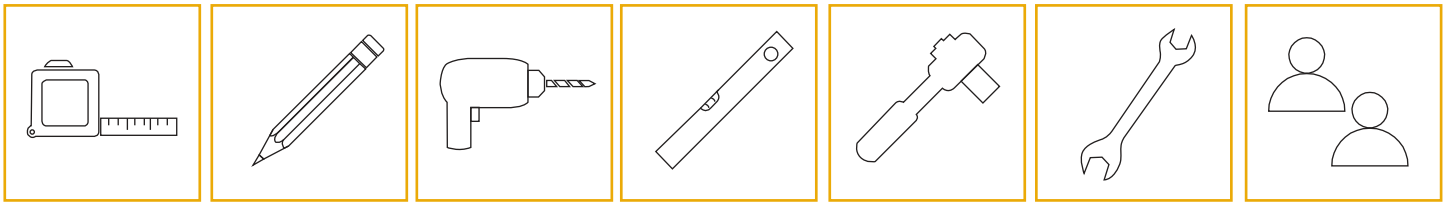


measuri
ng tape | pencil | drill | spirit level | socket wrench
ratchet | wrench | recommended
2 people


PARTS INCLUDED
(FOR SINGLE-LEAF DOORS)

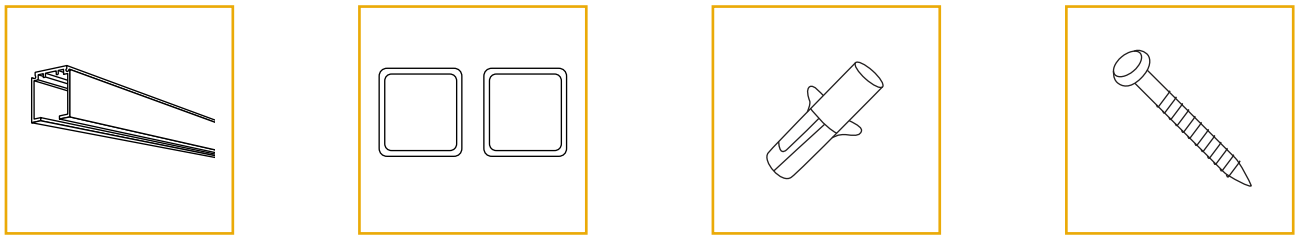

running track* | 2 x track end
cap | dowel* | screw*

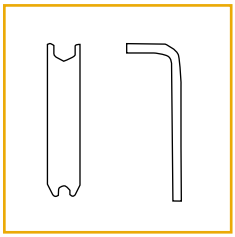


keys

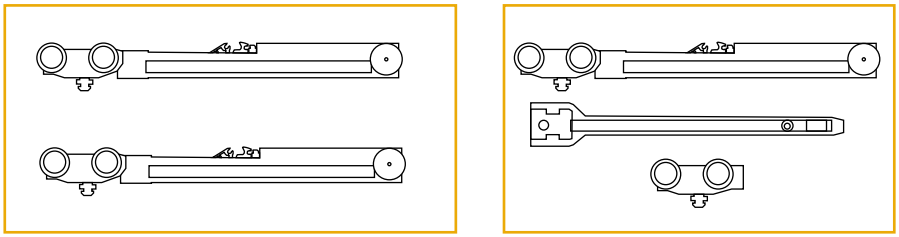

2 x roller carriage with integrated
soft-close mechanism

kit for narrow doors
45 ≤ x < 70 cm

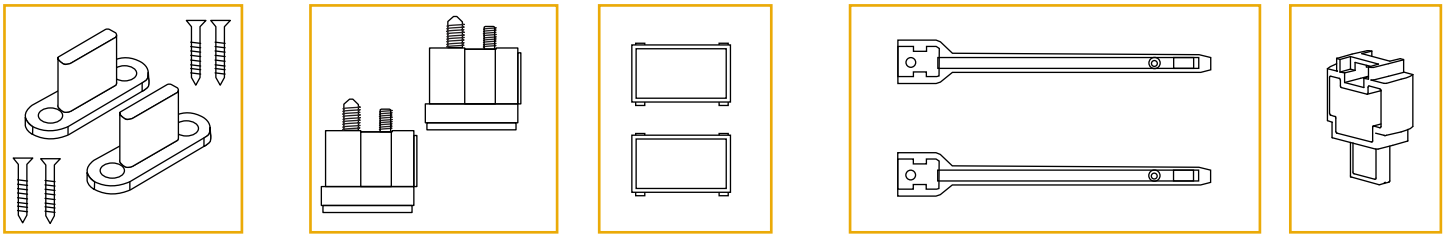

2 x bottom guide | 2 x stopper | 2 x stopper cap | 2 x soft-close
trigger | 1 x positioning
element

* the number of screws/dowels/connectors/track components will depend on the track length

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door


1 DRILL HOLES IN THE TRACK

On the inner part of the track, mark the points for drilling holes:

-on each track component:

- •mark holes 5 cm from both ends of the track component
- •distribute the remaining holes evenly between the previously marked points, at intervals no greater than 30 cm


-make sure all points are on one line.

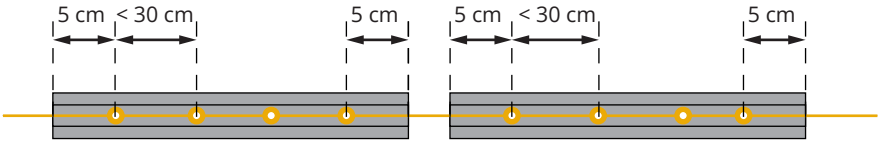


Then drill holes at the marked points.

Some tracks may have factory holes. To ensure proper weight distribution of the door, drill new holes according to the instructions provided.

2 DETERMINE TRACK POSITION - SINGLE-LEAF DOORS

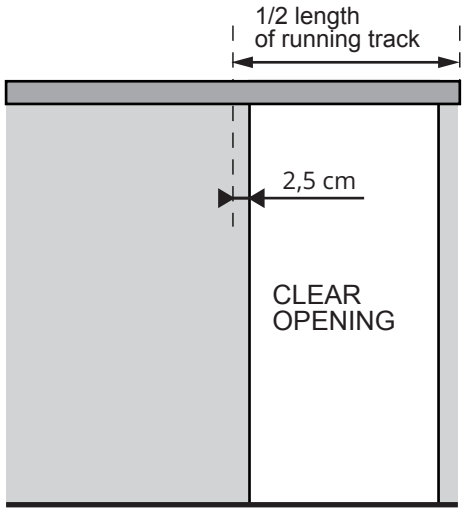


3 DETERMINE TRACK POSITION - DOUBLE-LEAF DOORS

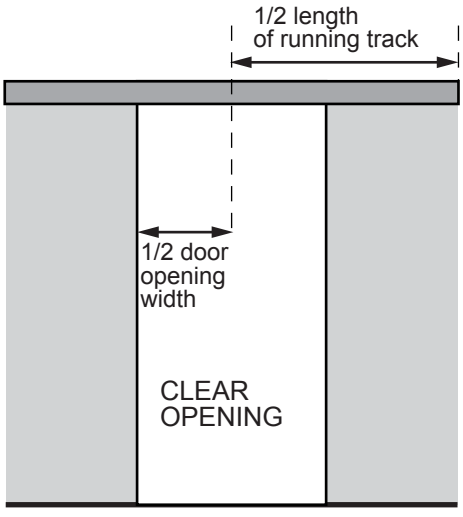

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

4 MARK THE MOUNTING POINTS FOR THE FIRST TRACK SECTION

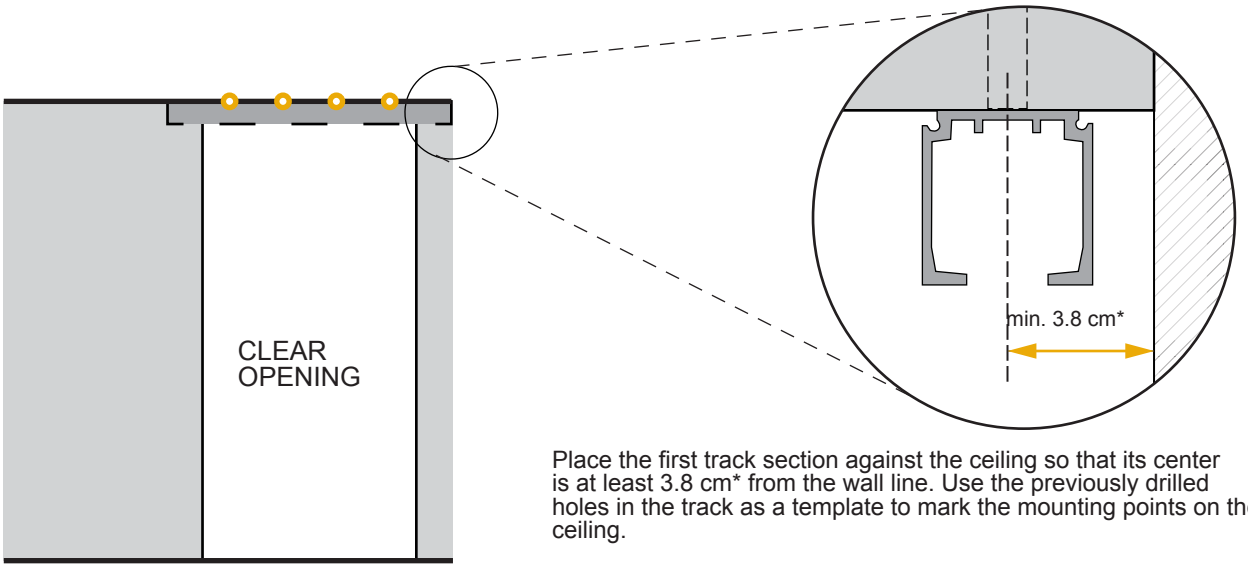

Place the first track section against the ceiling so that its center is at least 3.8 cm* from the wall line. Use the previously drilled holes in the track as a template to mark the mounting points on the ceiling.

* min. 3.8 cm for doors 4 cm thick

* min. 3.2 cm for Lara model

⚠ Before marking points on the ceiling, ensure the track is parallel to the wall line (or the top edge of the door opening).

RUNNING TRACK INSTALLATION


Single-leaf door / Double-leaf door


5 ATTACH THE FIRST TRACK SECTION

Drill holes at the previously marked points on the ceiling.

Before attaching the track to the ceiling, check that the distance from the end of the track to the adjacent wall is at least 7 cm (needed for roller carriage installation). Otherwise, install the roller carriages with soft-close mechanisms before attaching the track to the ceiling.

Insert dowels into the holes and screw the track to the ceiling.

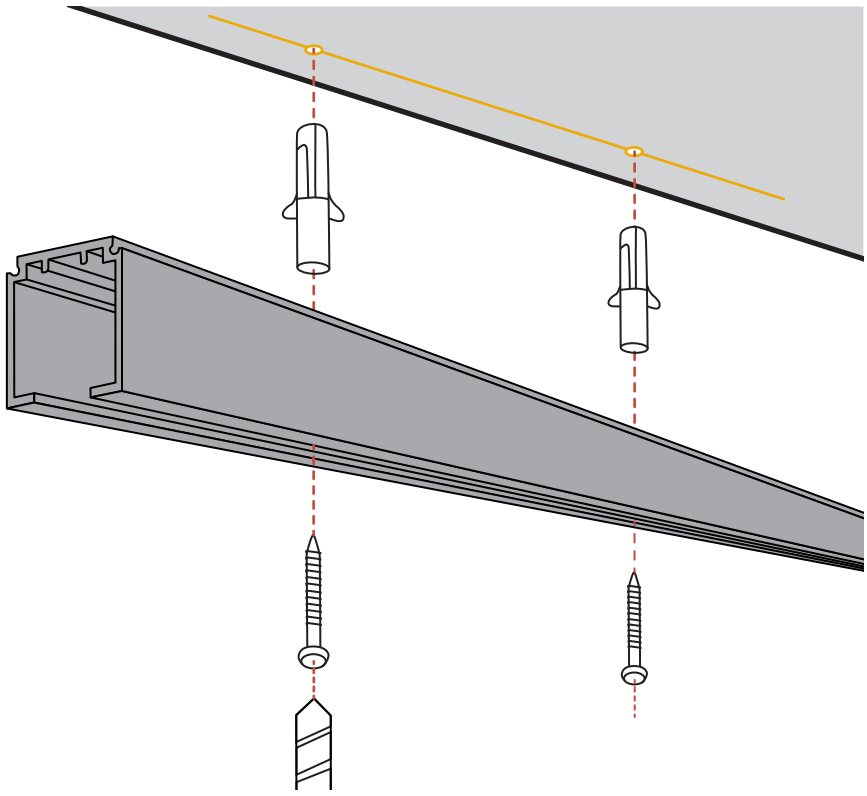

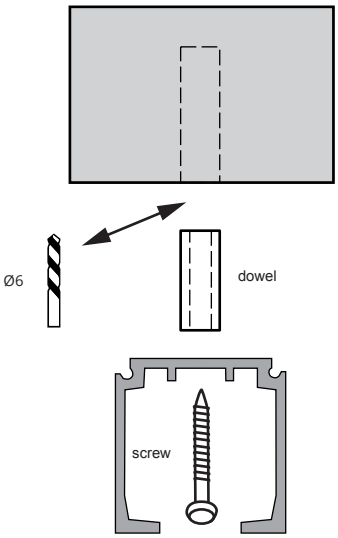


Make sure the screws are tightly fastened, so that the screw head fits snugly against the track surface.

Inaccurate tightening may cause problems with the soft-close mechanisms.

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

6 MARK THE MOUNTING POINTS FOR THE REMAINING TRACK SECTIONS

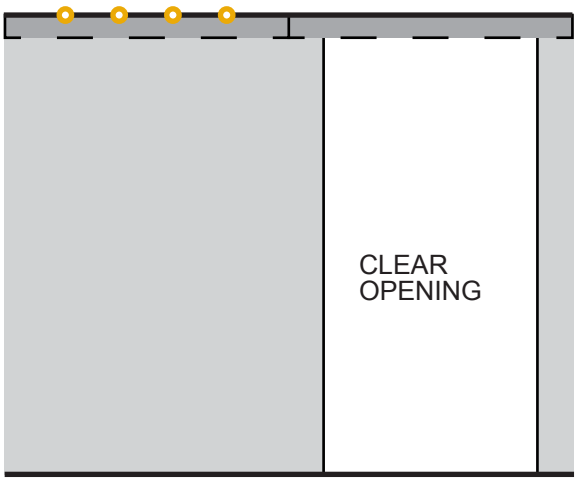


Place the second track section against the ceiling so that it forms a perfectly straight line with the already installed first track section.

Mark the mounting points on the ceiling, using the holes in the track as a template.

Ensure that both tracks are properly connected. Any unevenness or steps between the tracks can cause problems with smooth roller carriage movement.




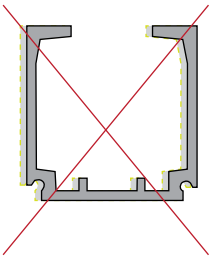



7 ATTACH THE REMAINING TRACK SECTIONS

Attach the second track section to the ceiling.

Then, in a similar manner, attach the remaining track sections.

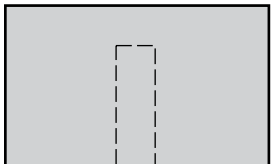

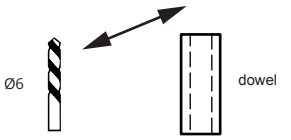

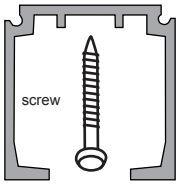


SYSTEM INSTALLATION

Doors with width x ≥ 45 cm


8 MOUNT THE ROLLER CARRIAGES WITH SOFT-CLOSE MECHANISMS

For narrow doors (width 45 ≤ x < 70 cm), the roller carriage with soft-close mechanism is mounted only on one side of the track - on the closing side of the door leaf.

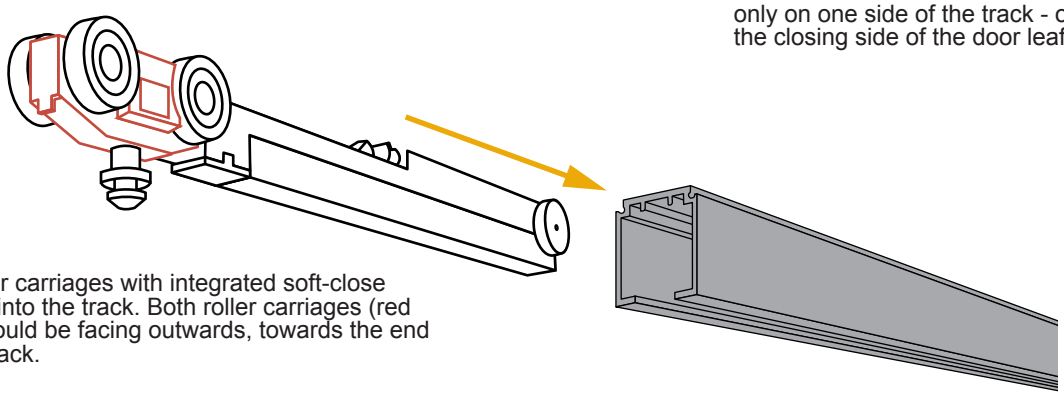

Slide the roller carriages with integrated soft-close mechanisms into the track. Both roller carriages (red elements) should be facing outwards, towards the end parts of the track.

9 MOUNT STOPPERS WITH SOFT-CLOSE TRIGGERS

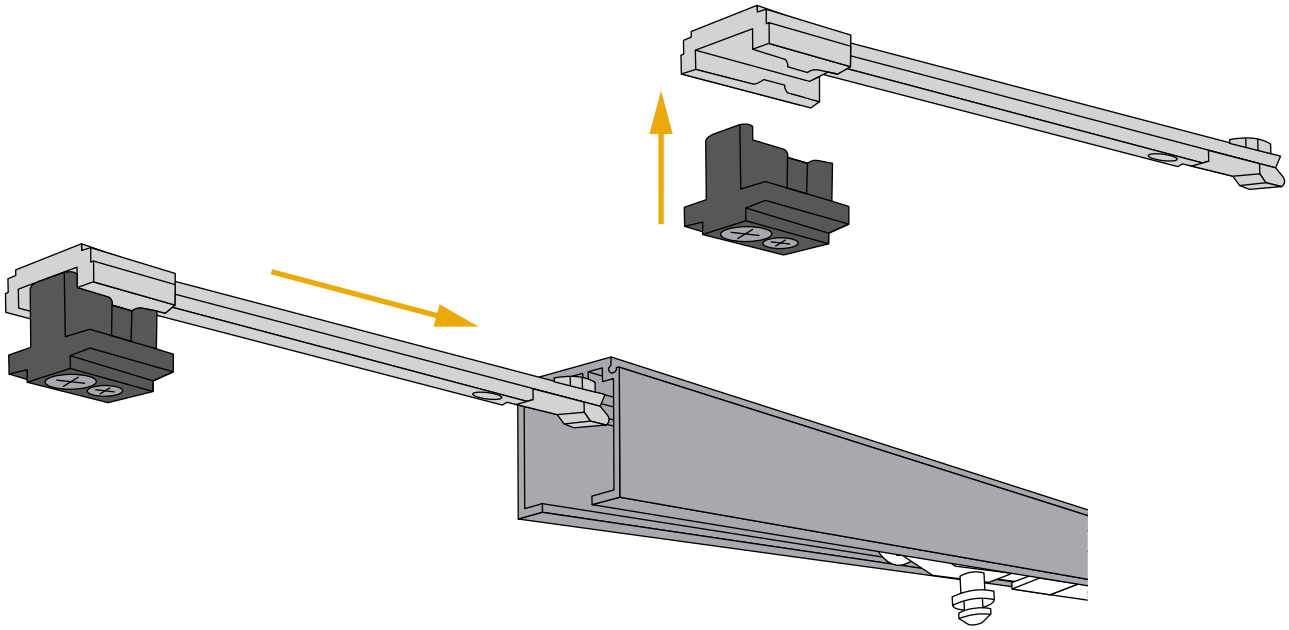

Connect the stopper to the soft-close trigger. Then, slide the entire mechanism into the track, starting from the trigger side.


SYSTEM INSTALLATION

Doors with width x ≥ 45 cm


10 INSTALL STOPPERS WITH SOFT-CLOSE MECHANISM TRIGGERS

After inserting the stopper mechanism, use the yellow positioning element to ensure that the long part of the trigger is exactly in the central groove inside the track.

Lightly tighten the stopper screws. The adjustment of the stopper's position to the correct position will occur at a later stage.

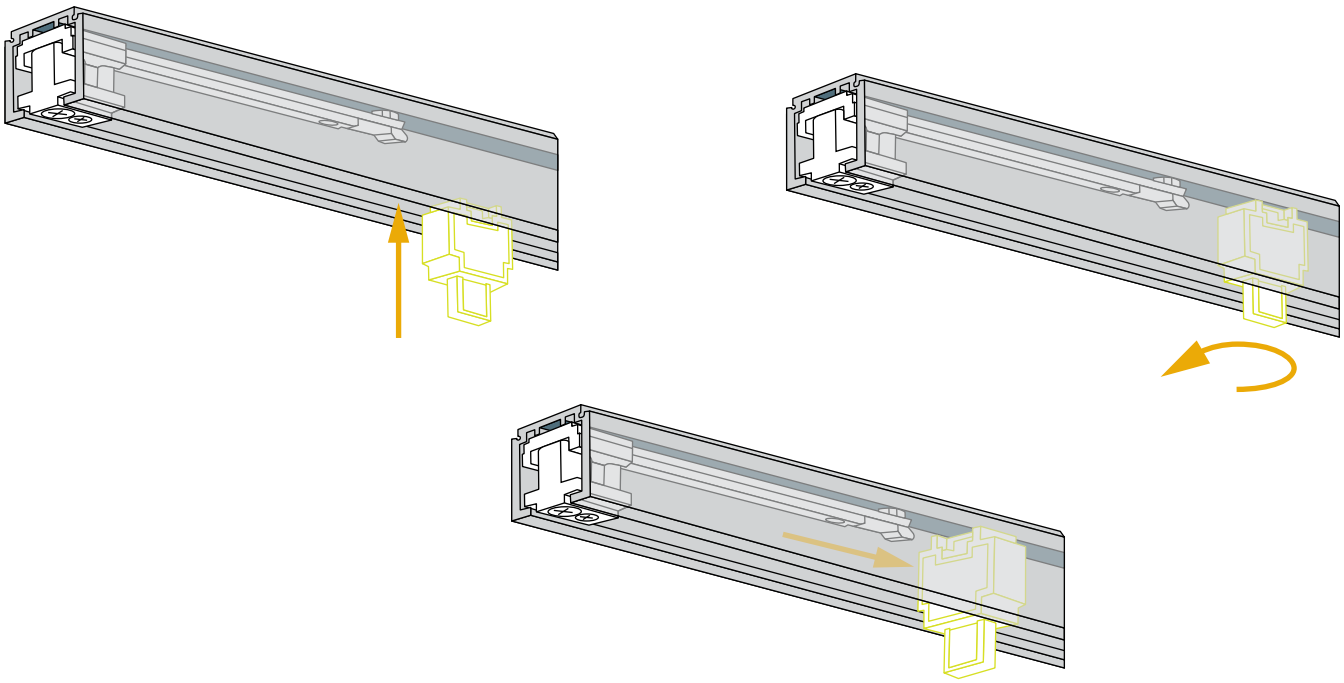


Correct trigger position.



SYSTEM INSTALLATION


Doors with width 45 cm ≤ x < 70 cm

11 MOUNT ROLLER CARRIAGE WITHOUT SOFT-CLOSE MECHANISM

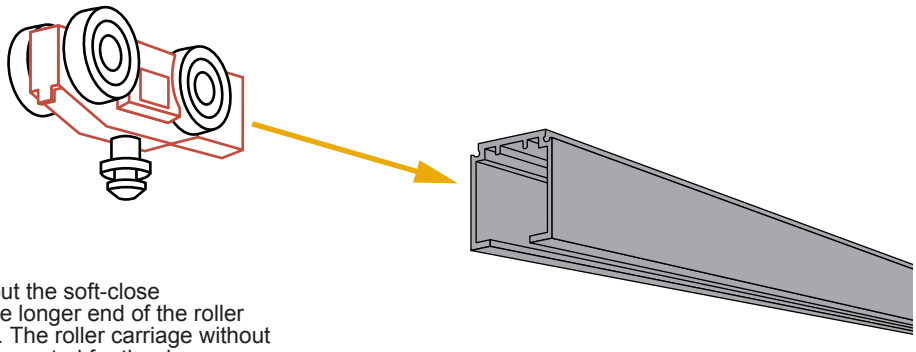

Slide the roller carriage without the soft-close mechanism into the track. The longer end of the roller carriage should face inwards. The roller carriage without the soft-close mechanism is mounted for the door opening function.

12 MOUNT STOPPER

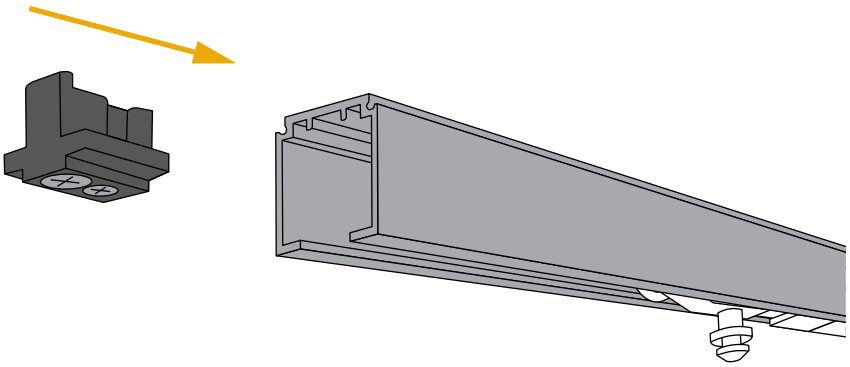


DOOR INSTALLATION

13A HANG THE DOOR ON THE CARRIAGES

To facilitate hanging the door on the roller carriages, set the roller carriage adjustment screw to the lowest position (see point 14).


Lift the door at a slight angle (two people), then place the door onto the roller carriages so that the protruding roller carriage screws are in the special holes on the door brackets.

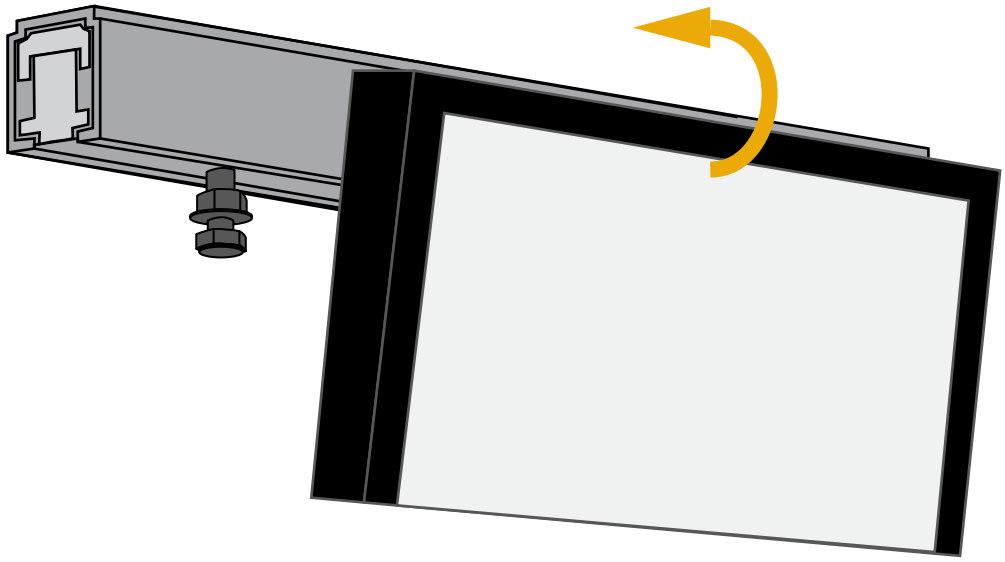

13B HANG THE DOOR ON THE CARRIAGES

Hang the door on the roller carriage adjustment-fixing screws. Check if the door is at the correct height. The gap between the bottom edge of the door and the floor should be approximately 0.7-0.8 cm, which ensures proper operation of the bottom guide. Tighten the screws firmly using the included wrench.

⚠ If the gap from the floor is too small or too large, adjust the door position (point 12).

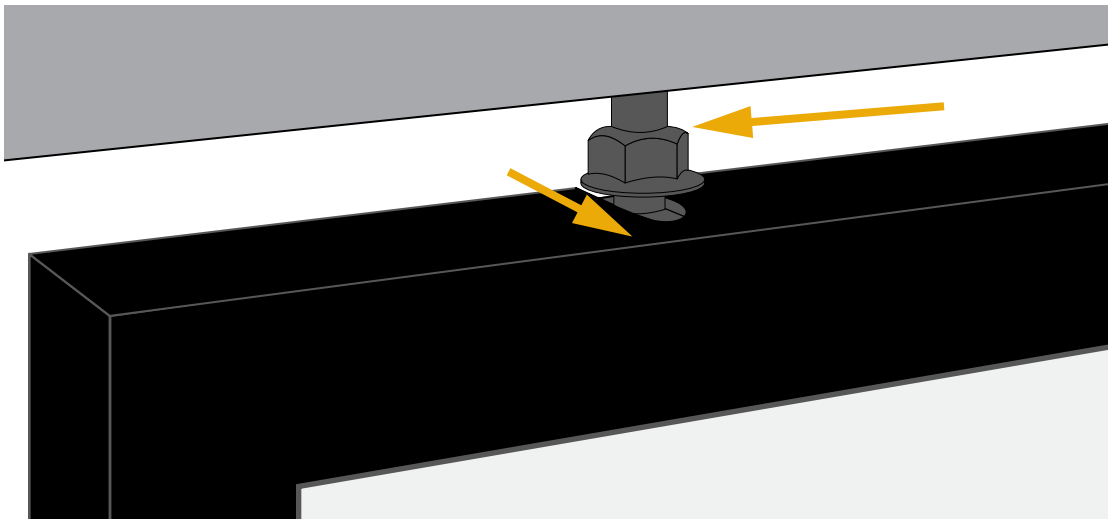


DOOR INSTALLATION

14 ADJUST DOOR POSITION


Using the roller carriage adjustment-fixing screw, you can change the gap between the track and the door, thereby increasing or decreasing the distance of the bottom edge of the door from the floor.

To do this, remove the door from the roller carriages. Correct the position of the adjustment screw by turning it up or down. Then hang the door according to point 11. Repeat the adjustment steps if necessary.

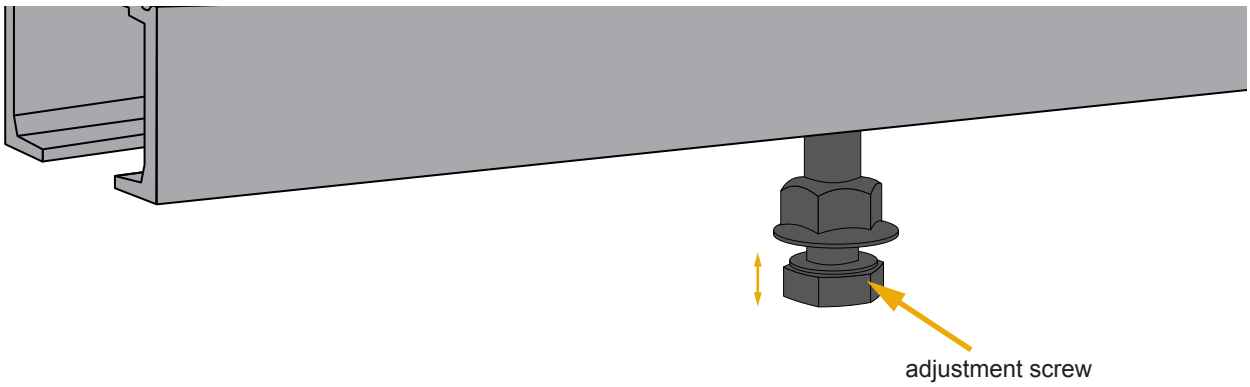


15 SECURE DOOR POSITION


The roller carriage adjustment-fixing screw has a special nut, the purpose of which is to secure the door in the set position. Tighten the securing nut firmly to the door frame using the included wrench.

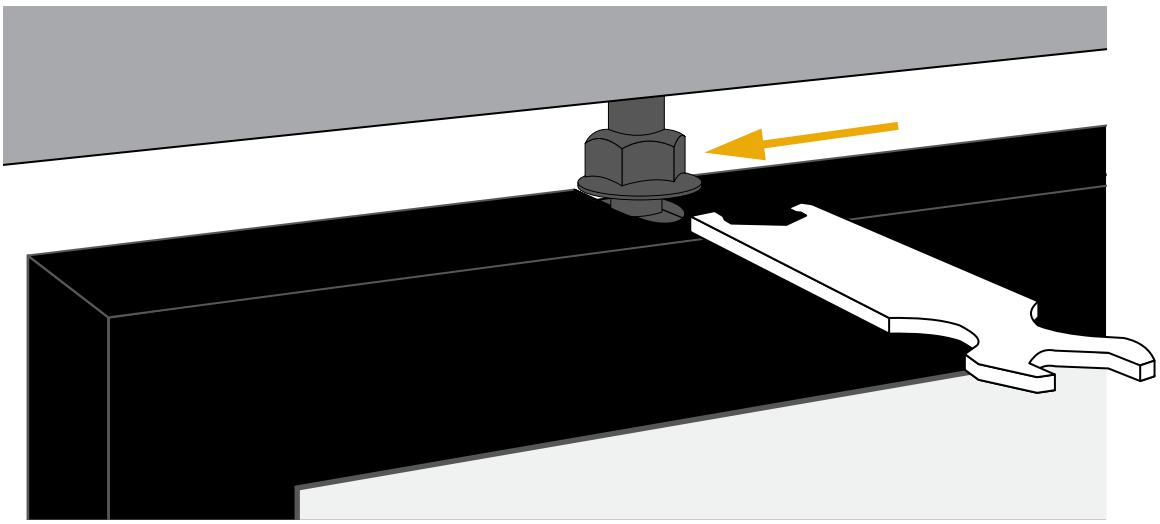



BOTTOM GUIDE INSTALLATION

16 INSTALL THE BOTTOM GUIDE

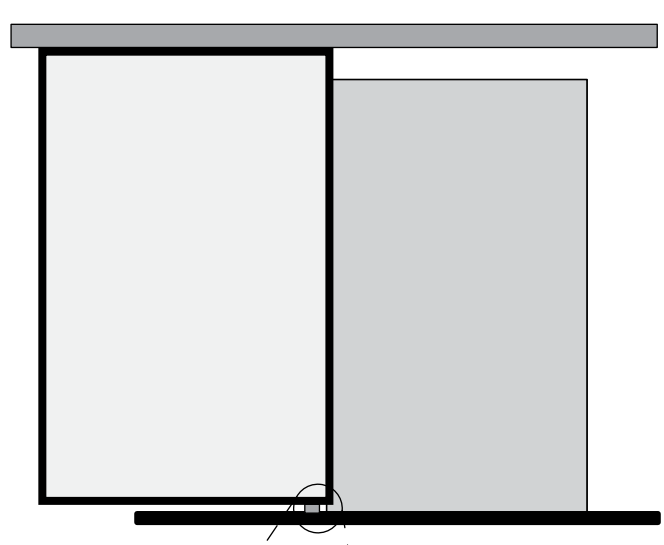

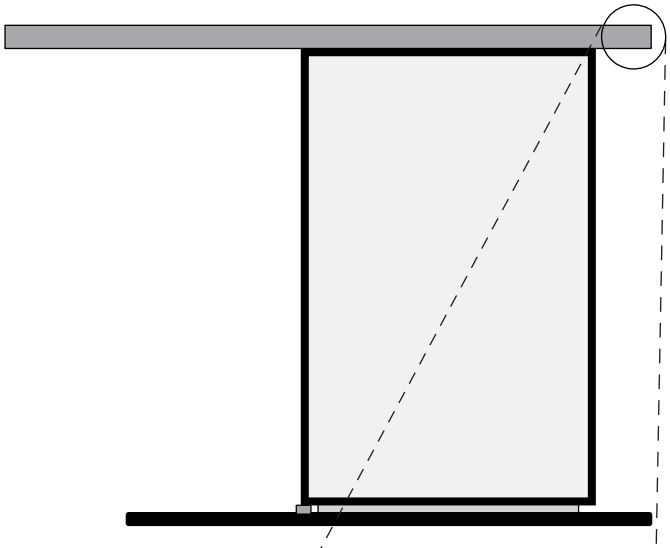

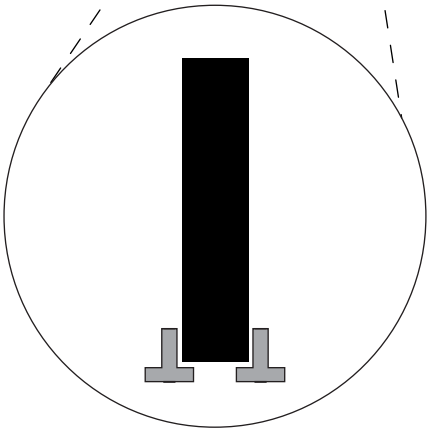

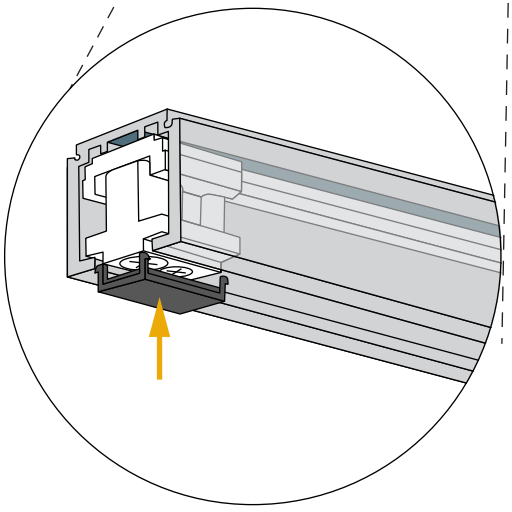

Install the bottom guide close to the edge of the door opening (approx. 0-1 cm from the edge), so that when the door is fully open or closed, the bottom guide will always be in line with the door.


Move the door to the fully closed position and adjust the position of the previously mounted stopper. Tighten the screws firmly, then attach the cap.

Repeat for the fully open position.

TRACK INSTALLATION

17 INSTALL END CAPS

Place end caps on both ends of the track.

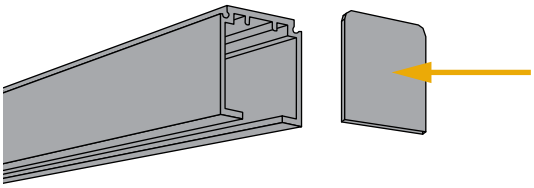



RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu