



INSTALLATION MANUAL

Top Ceiling System - ceiling mounting
- wooden doors



STRUCTURAL INFORMATION

For Top systems for single-leaf and double-leaf doors



1

All Reno sliding systems require mounting into structural material to a depth of at least 6 cm. The wall or structures where the system will be mounted must be designed to support the specified weight for the system.

SYSTEM	DOOR WEIGHT LIMIT
Top Ceiling	up to 120 kg

2

Ensure that the doors to be installed are made of solid structural material in the areas where hangers, bottom guide, and handles (if used) are mounted.

3


Contact your contractor and/or local building authorities to confirm compliance with local building codes.

4


For best results and to ensure full compliance with local building codes, seek qualified construction professionals with knowledge of structural material properties and building conditions.

MAIN COMPONENTS

TOOLS NEEDED

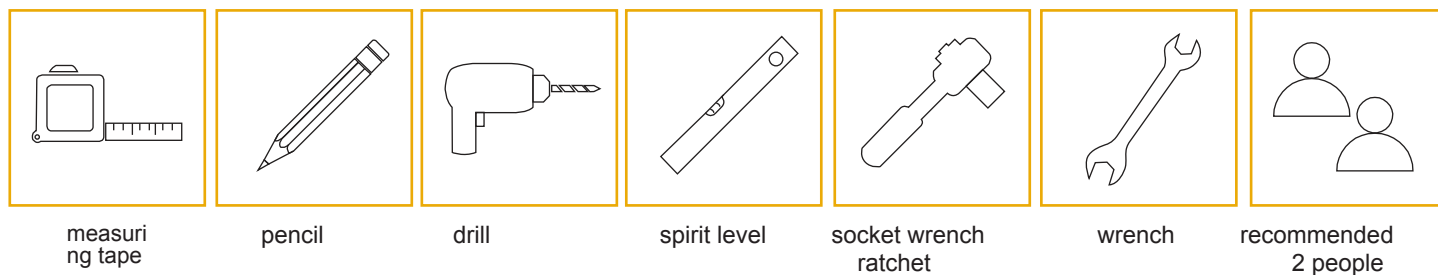

PARTS INCLUDED (FOR SINGLE-LEAF DOORS)

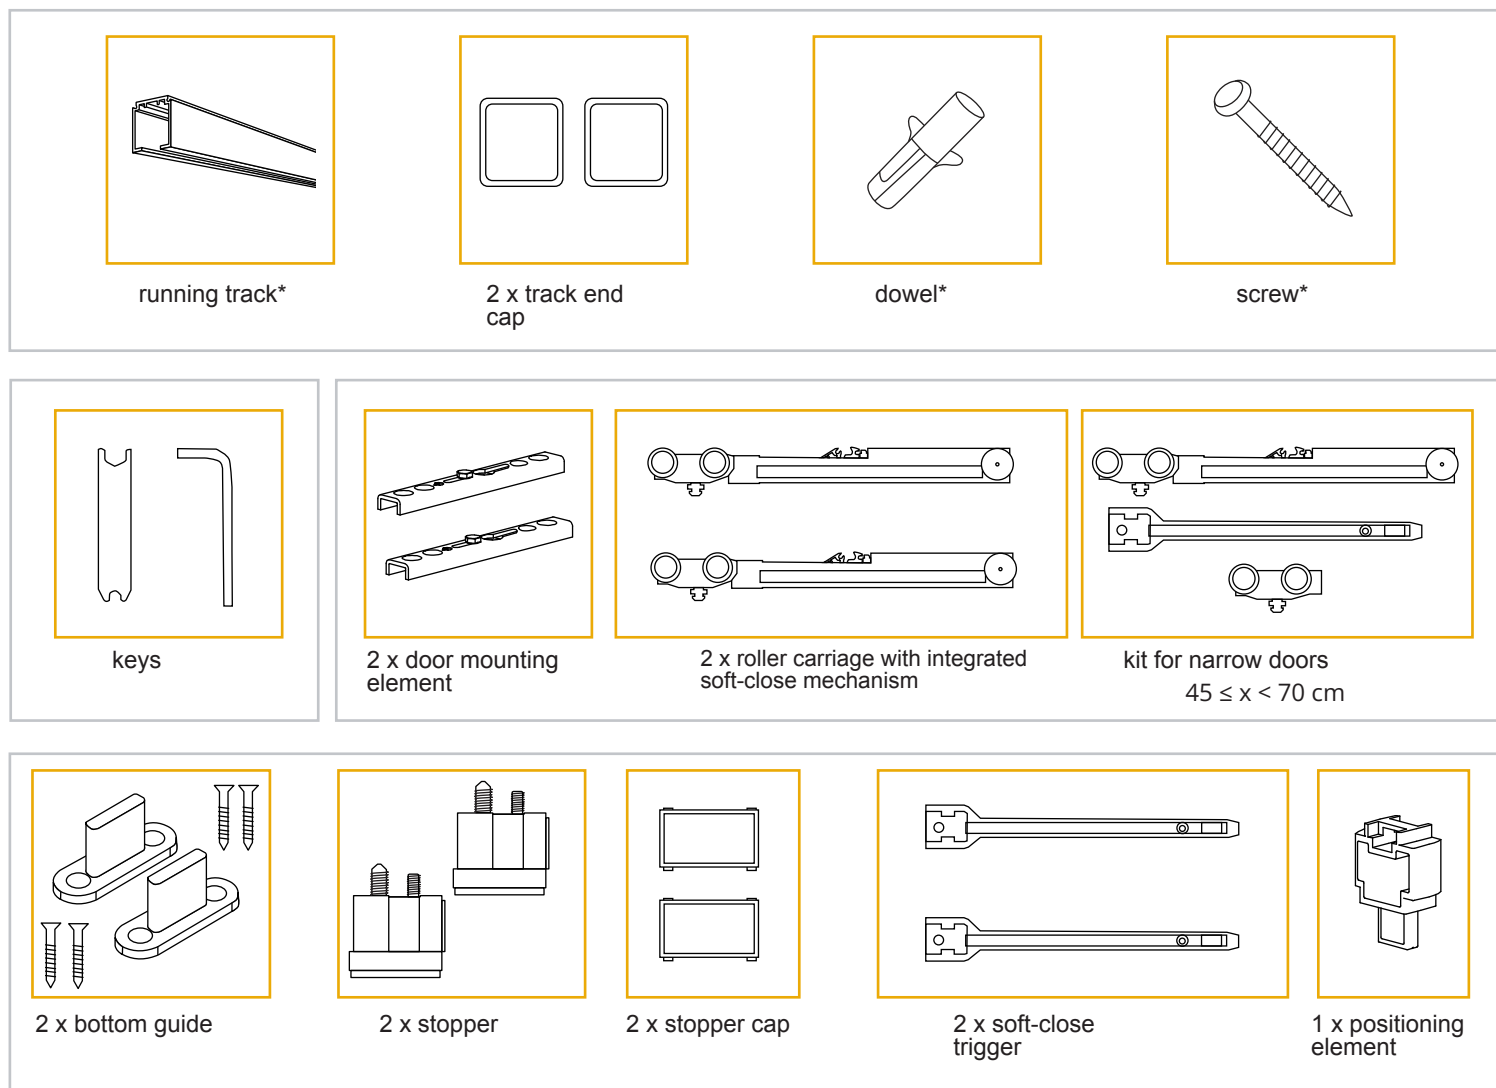

* the number of screws/dowels/connectors/track components will depend on the track length


RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

1 DRILL HOLES IN THE TRACK

On the inner part of the track, mark the points for drilling holes:

- on each track component:
 - mark holes 5 cm from both ends of the track component
 - distribute the remaining holes evenly between the previously marked points, at intervals no greater than 30 cm
- make sure all points are on one line.

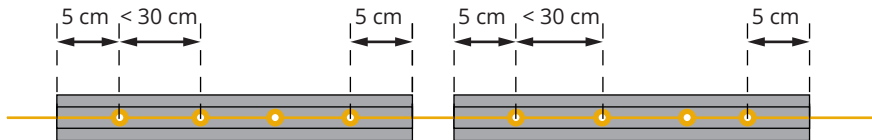


Then drill holes at the marked points.




Some tracks may have factory holes. To ensure proper weight distribution of the door, drill new holes according to the instructions provided.

2 DETERMINE TRACK POSITION - SINGLE-LEAF DOORS

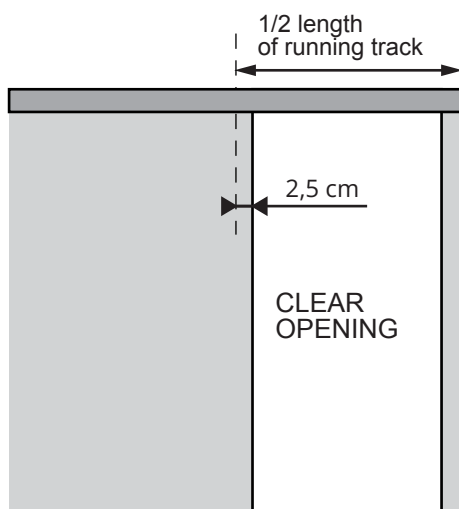


3 DETERMINE TRACK POSITION - DOUBLE-LEAF DOORS

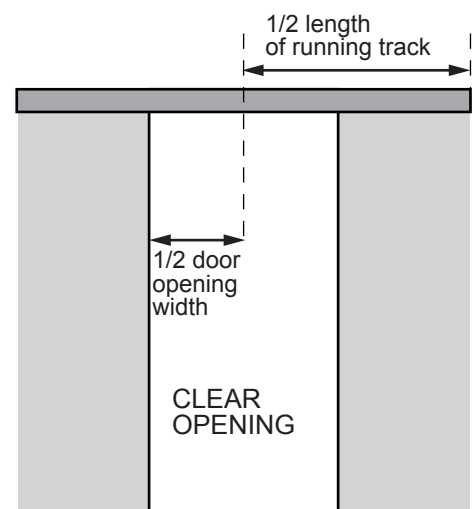

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

4 MARK THE MOUNTING POINTS FOR THE FIRST TRACK SECTION

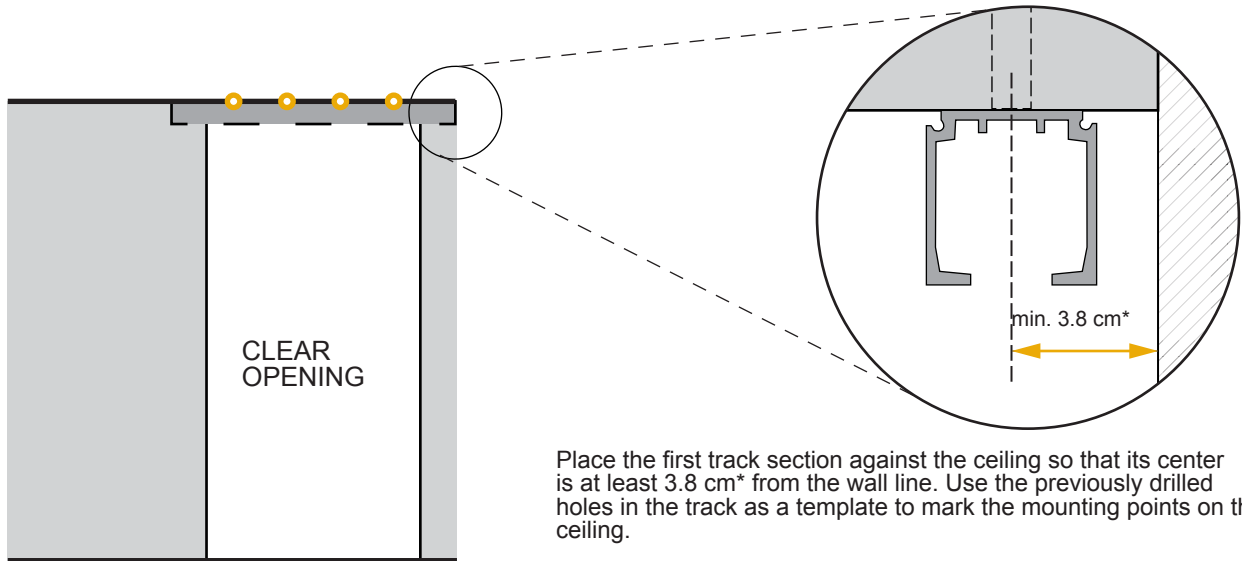

Place the first track section against the ceiling so that its center is at least 3.8 cm* from the wall line. Use the previously drilled holes in the track as a template to mark the mounting points on the ceiling.

* min. 3.8 cm for doors 4 cm thick



Before marking points on the ceiling, ensure the track is parallel to the wall line (or the top edge of the door opening).

RUNNING TRACK INSTALLATION


Single-leaf door / Double-leaf door

5 ATTACH THE FIRST TRACK SECTION

Drill holes at the previously marked points on the ceiling.

Before attaching the track to the ceiling, check that the distance from the end of the track to the adjacent wall is at least 7 cm (needed for roller carriage installation). Otherwise, install the roller carriages with soft-close mechanisms before attaching the track to the ceiling.


Insert dowels into the holes and screw the track to the ceiling.

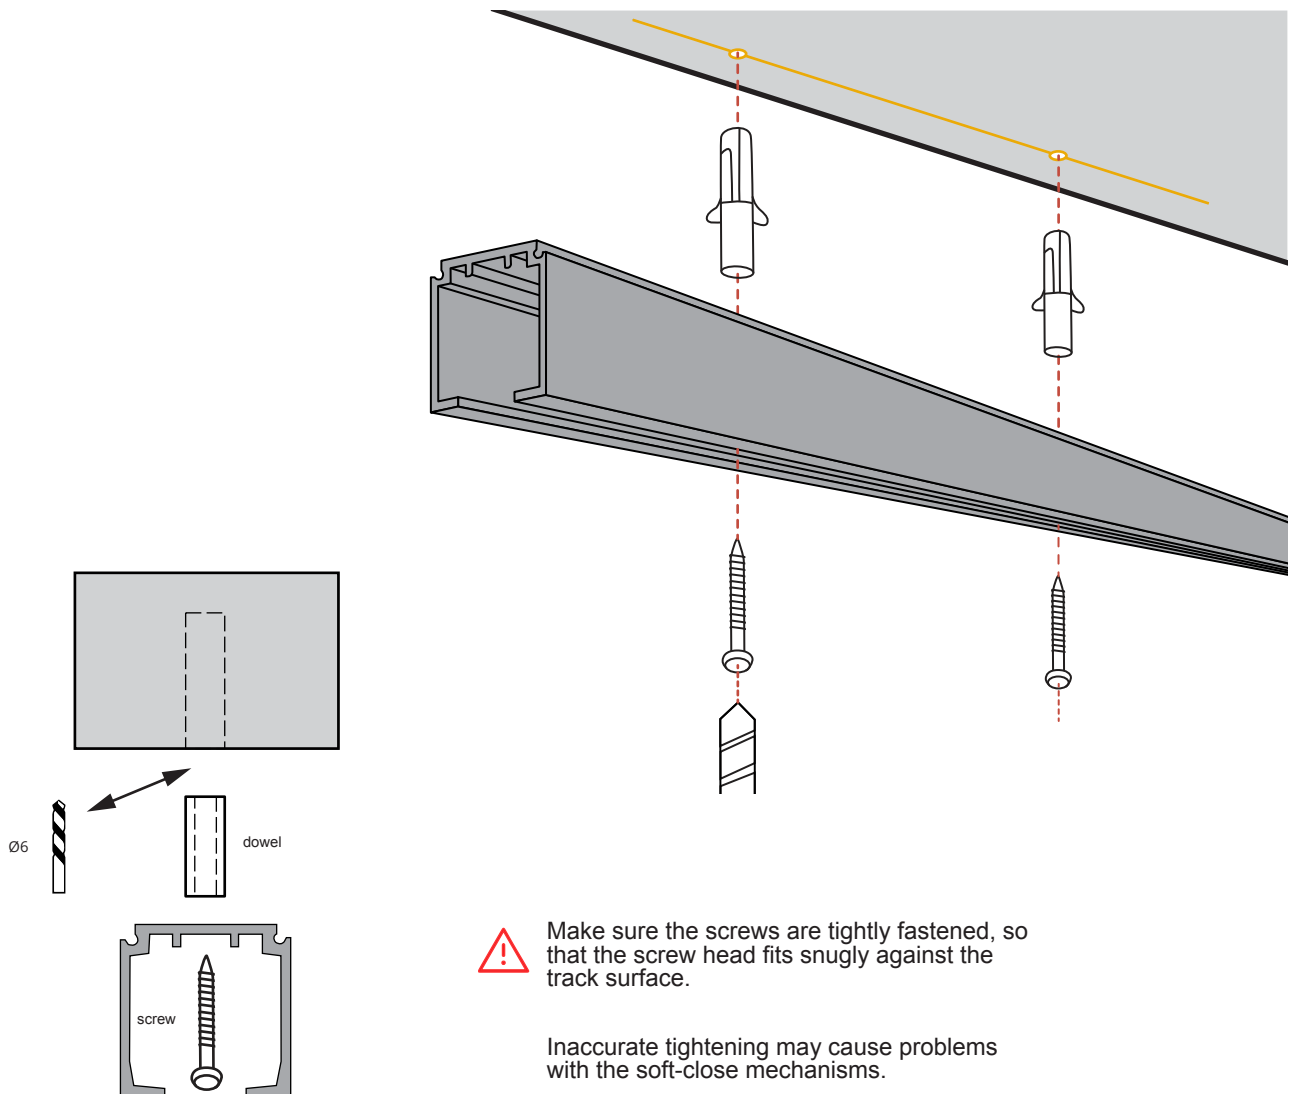

RUNNING TRACK INSTALLATION

Single-leaf door / Double-leaf door

6 MARK THE MOUNTING POINTS FOR THE REMAINING TRACK SECTIONS

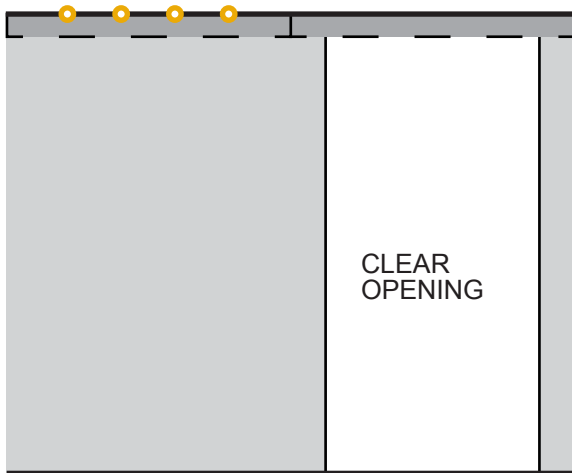


Place the second track section against the ceiling so that it forms a perfectly straight line with the already installed first track section.

Mark the mounting points on the ceiling, using the holes in the track as a template.






Ensure that both tracks are properly connected. Any unevenness or steps between the tracks can cause problems with smooth roller carriage movement.

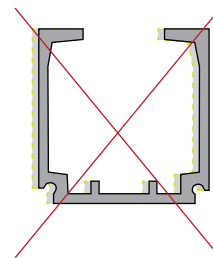

7 ATTACH THE REMAINING TRACK SECTIONS

Attach the second track section to the ceiling.

Then, in a similar manner, attach the remaining track sections.

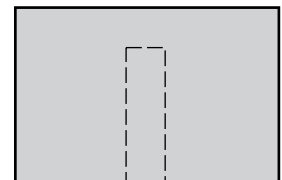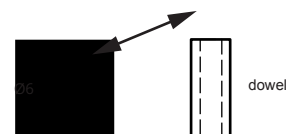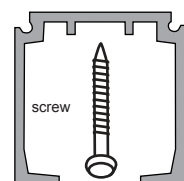


SYSTEM INSTALLATION

Doors with width $x \geq 45$ cm


8 MOUNT THE ROLLER CARRIAGES WITH SOFT-CLOSE MECHANISMS




For narrow doors (width $45 \leq x < 70$ cm), the roller carriage with soft-close mechanism is mounted only on one side of the track - on the closing side of the door leaf.

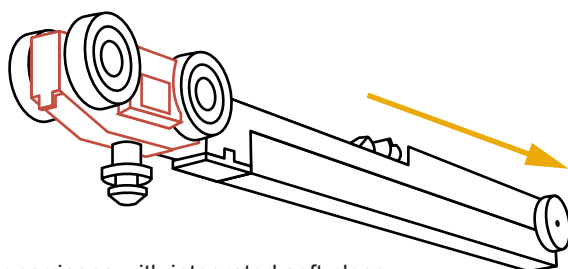

Slide the roller carriages with integrated soft-close mechanisms into the track. Both roller carriages (red elements) should be facing outwards, towards the end parts of the track.

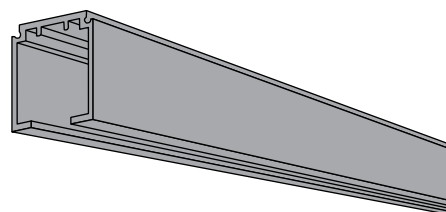

9 INSTALL STOPPERS WITH SOFT-CLOSE MECHANISM TRIGGERS

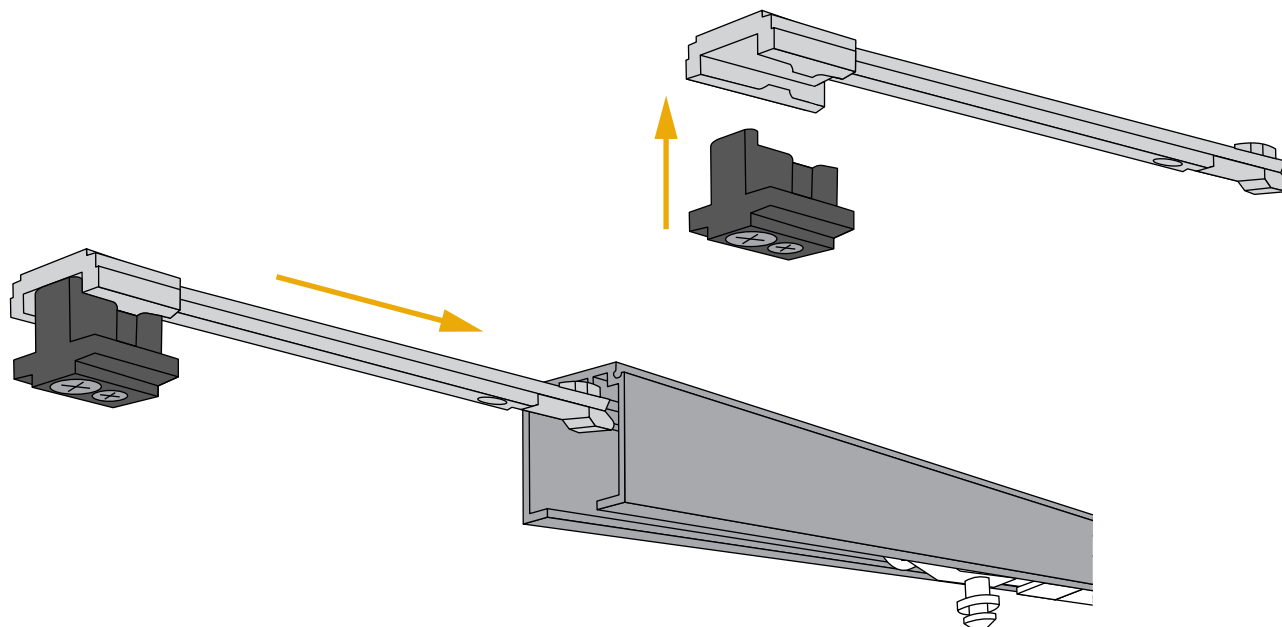

Connect the stopper to the soft-close trigger. Then, slide the entire mechanism into the track, starting from the trigger side.


SYSTEM INSTALLATION

Doors with width $x \geq 45$ cm


10 INSTALL STOPPERS WITH SOFT-CLOSE MECHANISM TRIGGERS

After inserting the stopper mechanism, use the yellow positioning element to ensure that the long part of the trigger is exactly in the central groove inside the track.

Lightly tighten the stopper screws. The adjustment of the stopper's position to the correct position will occur at a later stage.

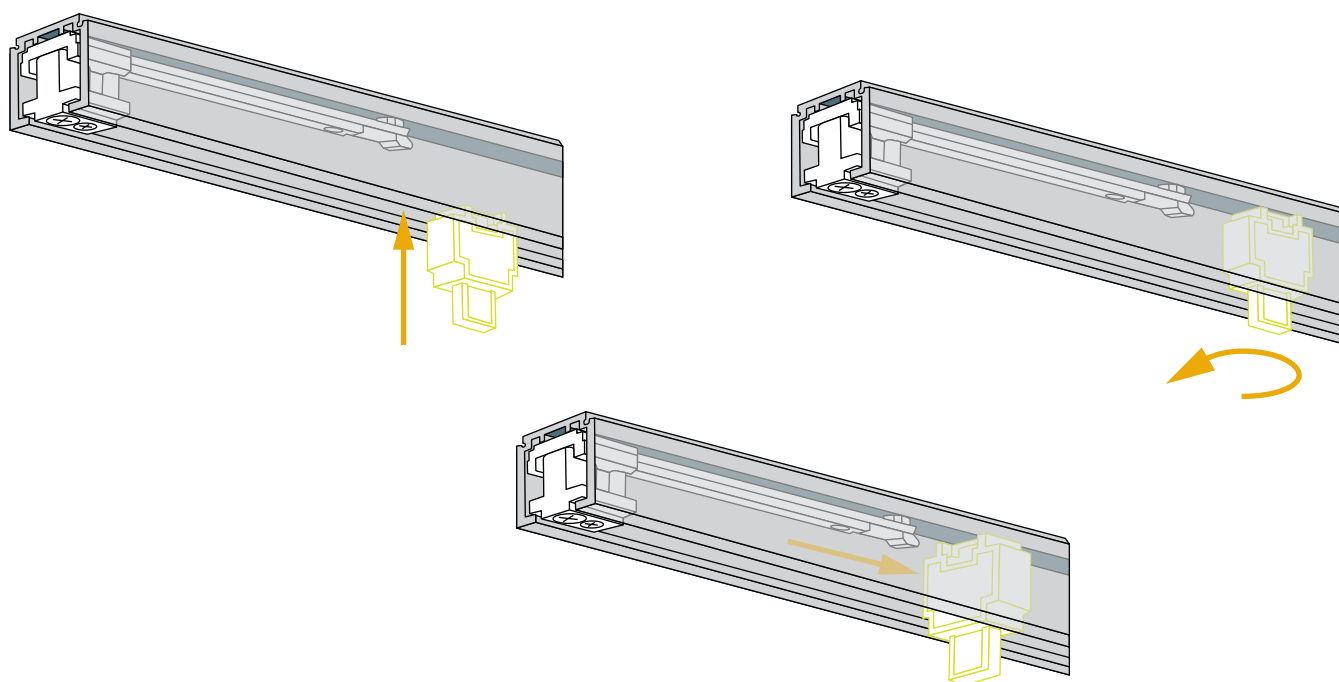


Correct trigger position.



SYSTEM INSTALLATION


Doors with width $45 \text{ cm} \leq x < 70 \text{ cm}$

11 MOUNT ROLLER CARRIAGE WITHOUT SOFT-CLOSE MECHANISM

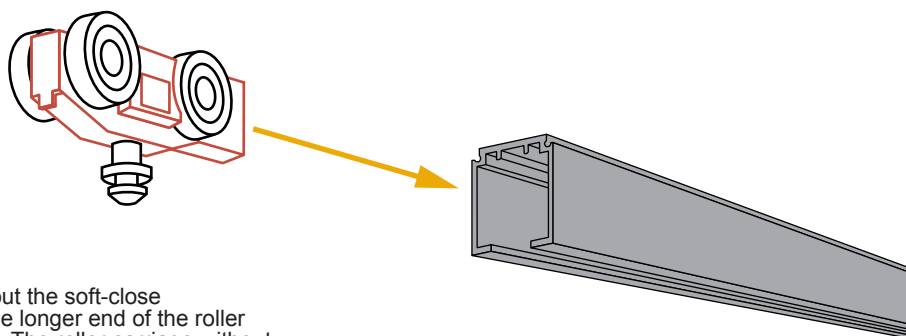

Slide the roller carriage without the soft-close mechanism into the track. The longer end of the roller carriage should face inwards. The roller carriage without the soft-close mechanism is mounted for the door opening function.

12 MOUNT STOPPER

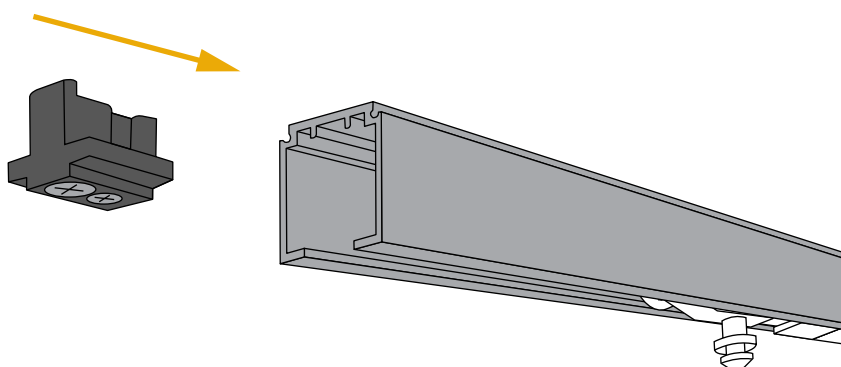

HANGER INSTALLATION

13 MOUNT BRACKETS FOR ROLLER CARRIAGES

Place the hanger brackets in the specially prepared recesses on the top edge of the door. The screw holes for the roller carriages should face the inside of the door.


Attach the brackets using the screws included in the set.



DOOR INSTALLATION


14 HANG THE DOOR ON THE CARRIAGES

Lift the door at a slight angle (two people), then place the door onto the roller carriages so that the protruding roller carriage screws are in the special holes on the door brackets.

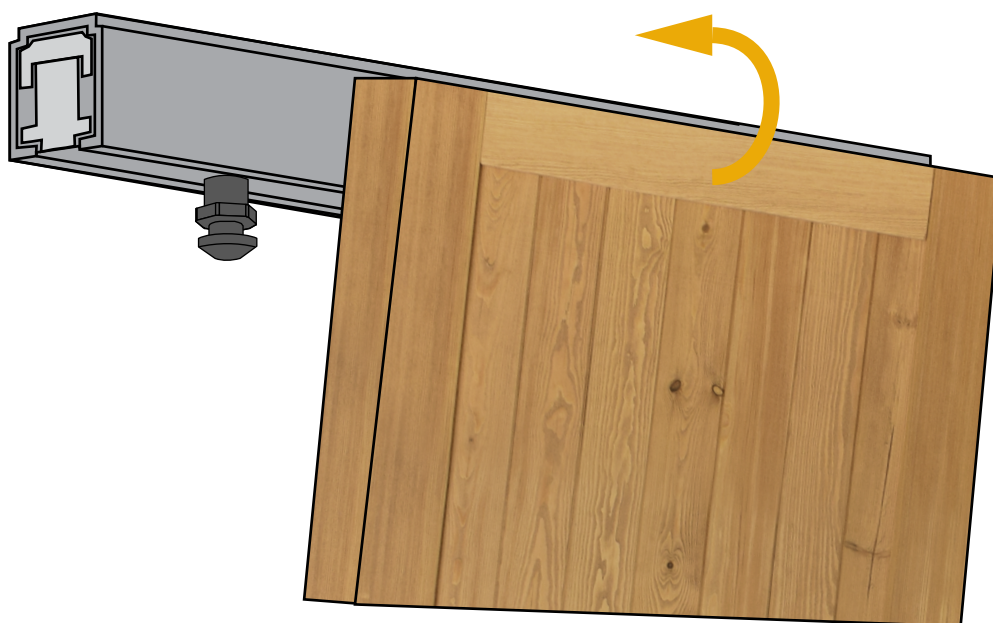

15 SET THE DOOR TO THE LOCKING POSITION


Hang the door on the roller carriage screws, then move the roller carriages with the screws to the locking position (towards the narrower part of the holes on the door brackets).

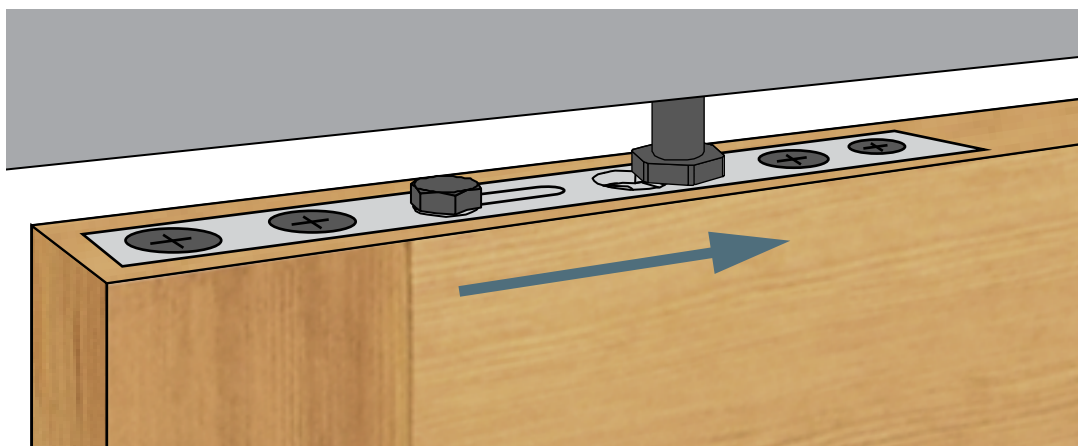

DOOR INSTALLATION


16 SECURE THE DOOR IN THE LOCKED POSITION

Move the door securing screw and tighten it firmly.

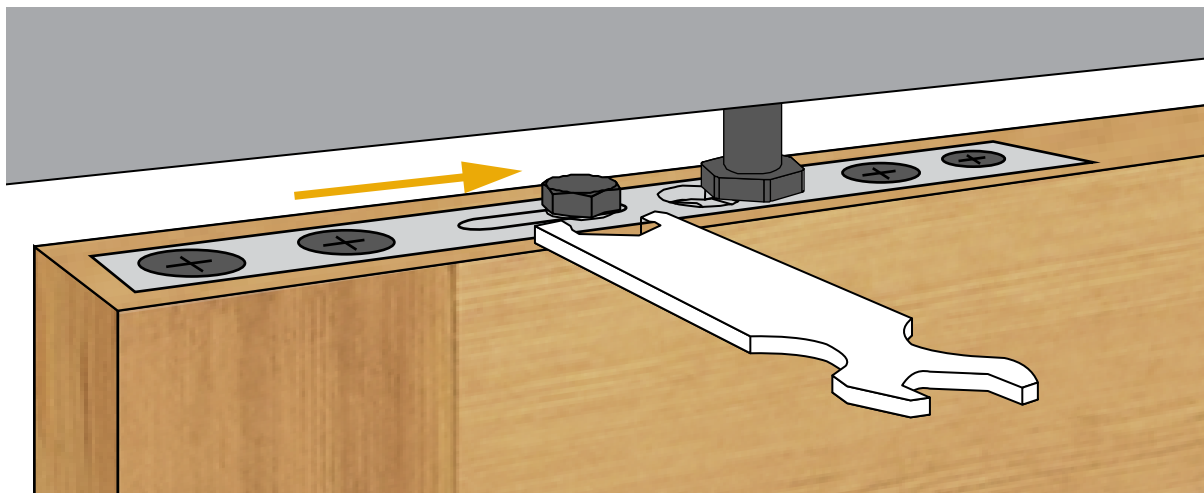


17 ADJUST DOOR POSITION

Use the sliding roller carriage screw, on which the door is hung, to adjust its position. This way, you can increase or decrease the gap between the track and the door. To do this, use the wrench included in the set, remembering that the gap between the bottom edge of the door and the floor should be 0.7-0.8 cm. This will ensure proper operation of the bottom guide.

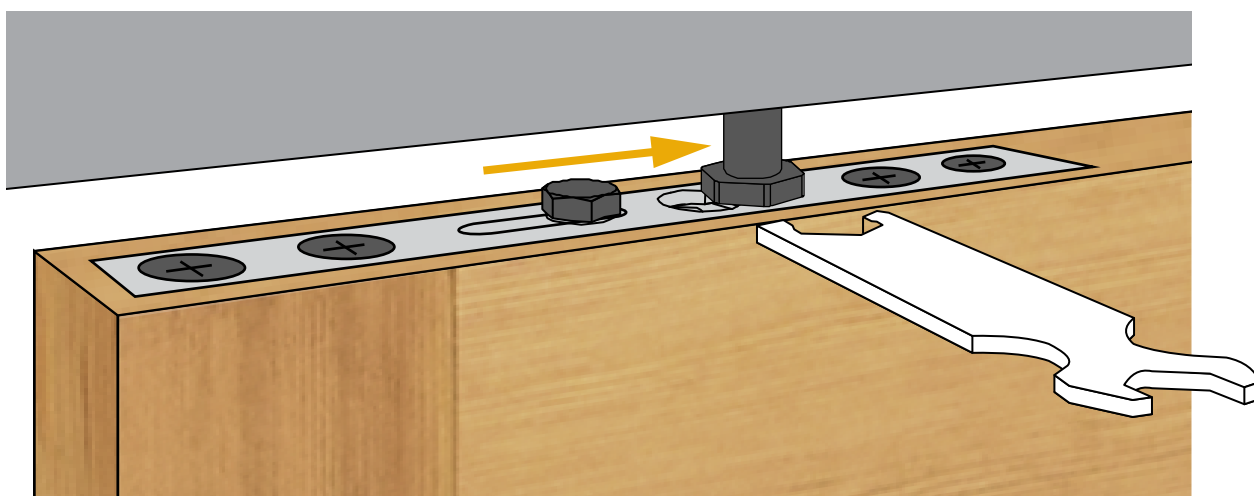

BOTTOM GUIDE INSTALLATION

18 INSTALL THE BOTTOM GUIDE

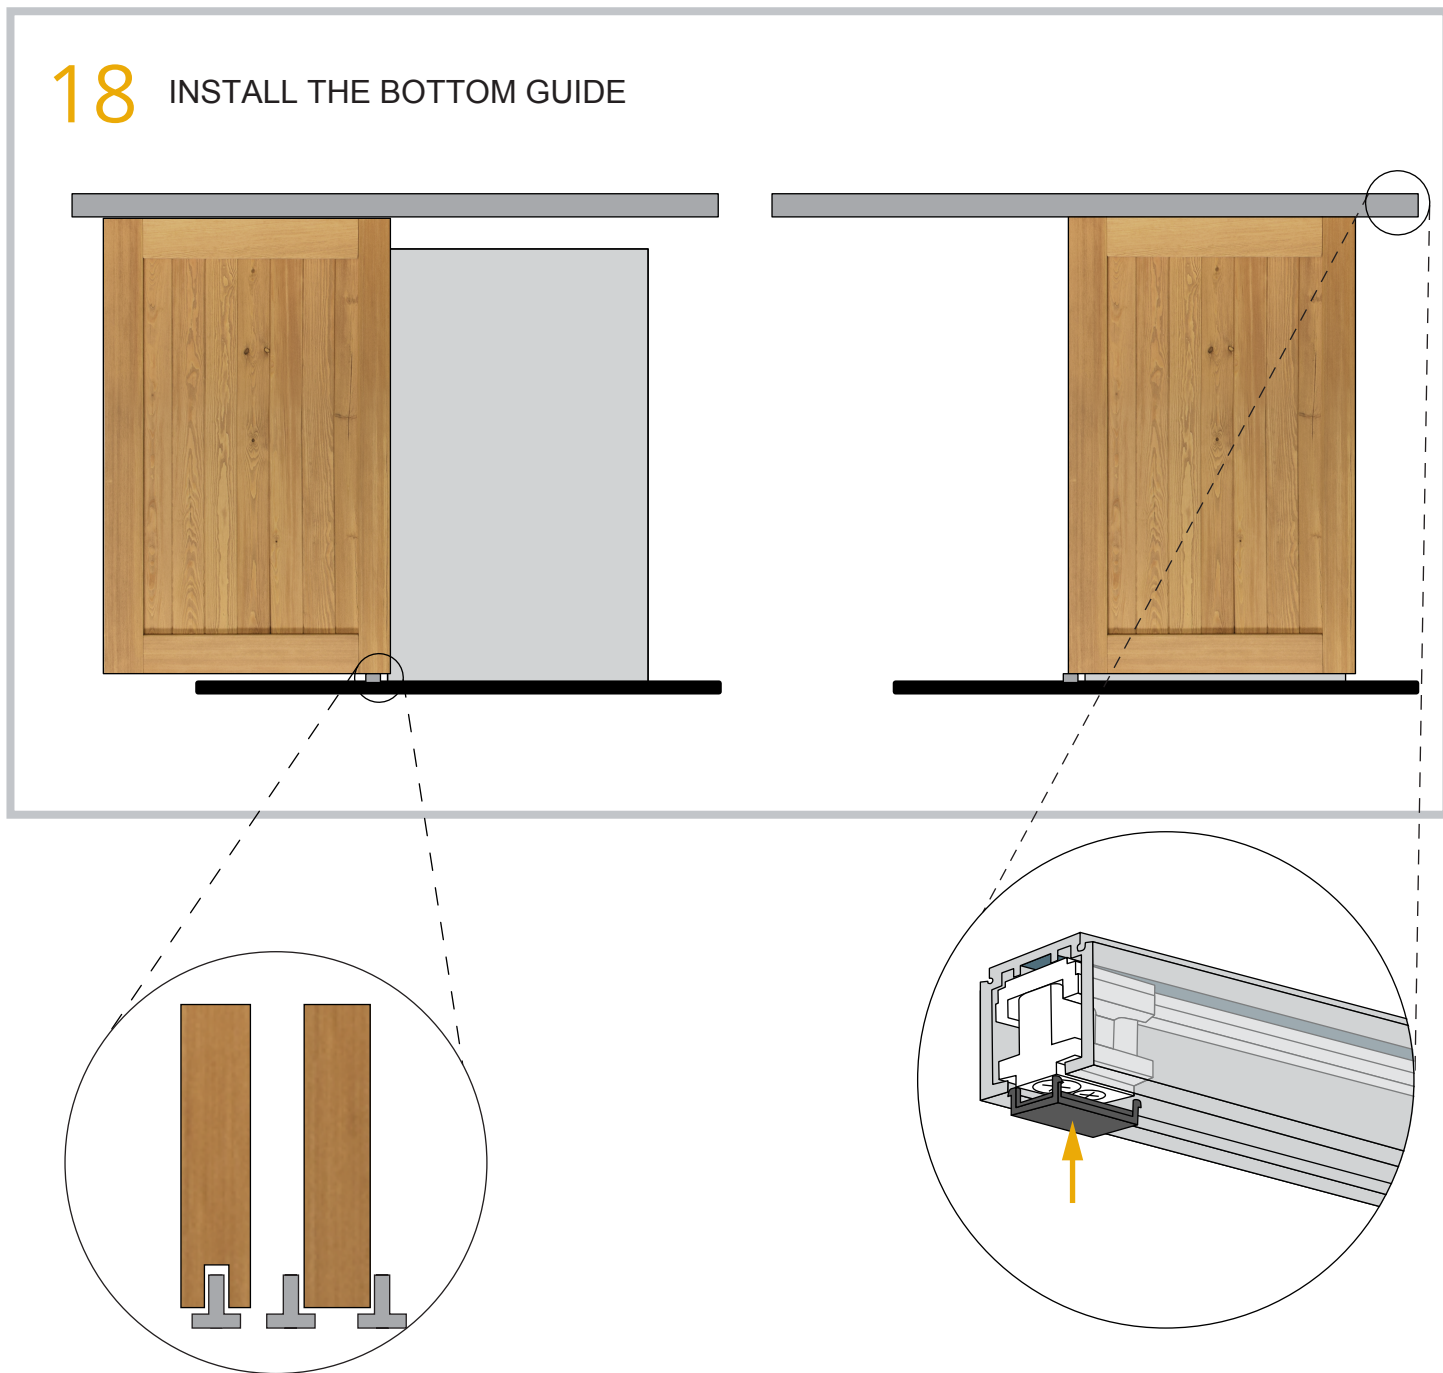

Install the bottom guide close to the edge of the door opening (approx. 0-1 cm from the edge), so that when the door is fully open or closed, the bottom guide will always be in line with the door.


Move the door to the fully closed position and adjust the position of the previously mounted stopper. Tighten the screws firmly, then attach the cap.


Repeat for the fully open position.

TRACK INSTALLATION

19 INSTALL END CAPS

Place end caps on both ends of the track.

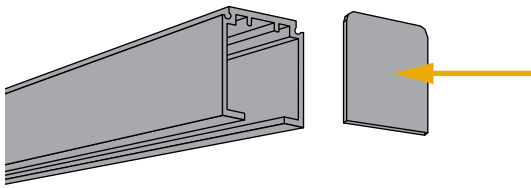

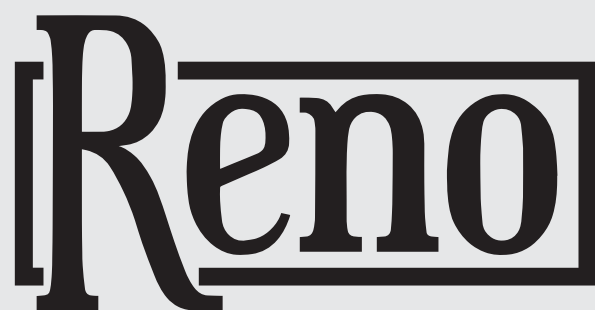

RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu