
Reno


INSTALLATION MANUAL

Pi + Flat handle set

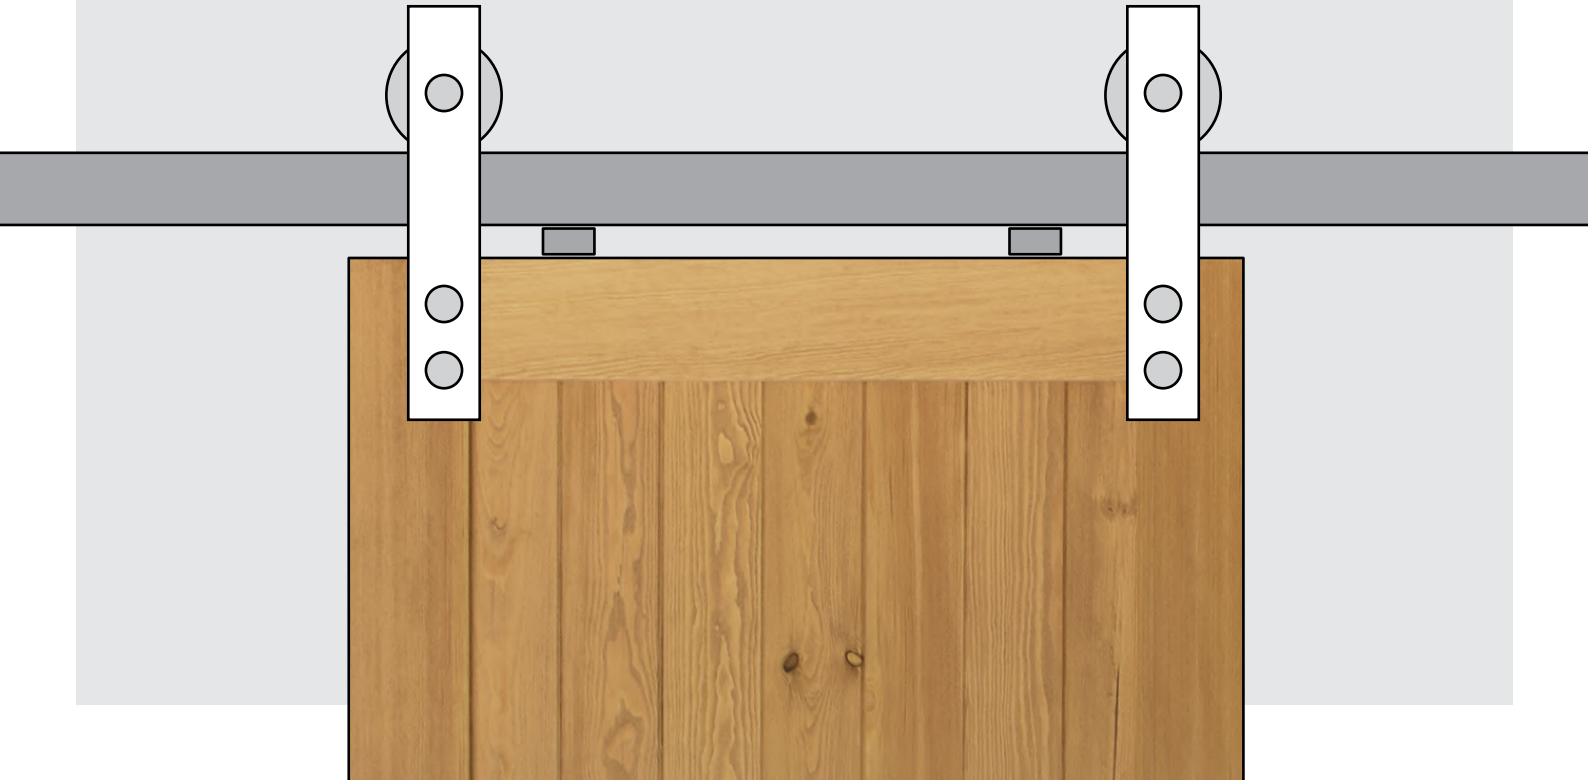


MAIN COMPONENTS

TOOLS NEEDED

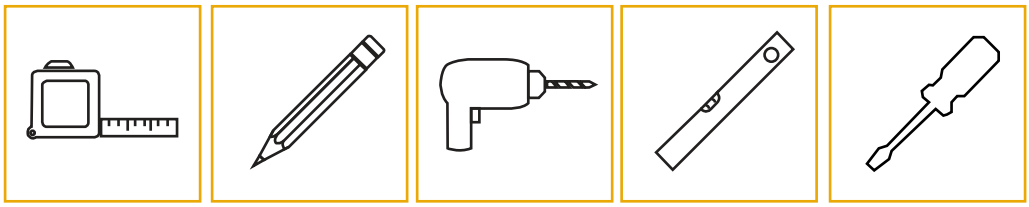

measuri
ng tape | pencil | drill | spirit level | screwdriver


INCLUDED PARTS

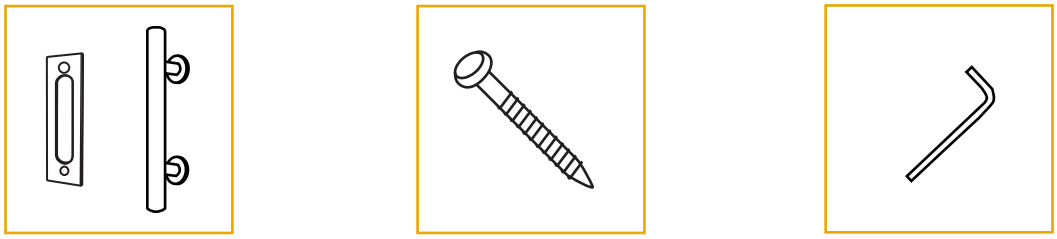


handle set | 2x screw | 1x Allen key

INSTALLATION OF PI + FLAT SET


1 MARK HOLE POSITIONS FOR HANDLE INSTALLATION

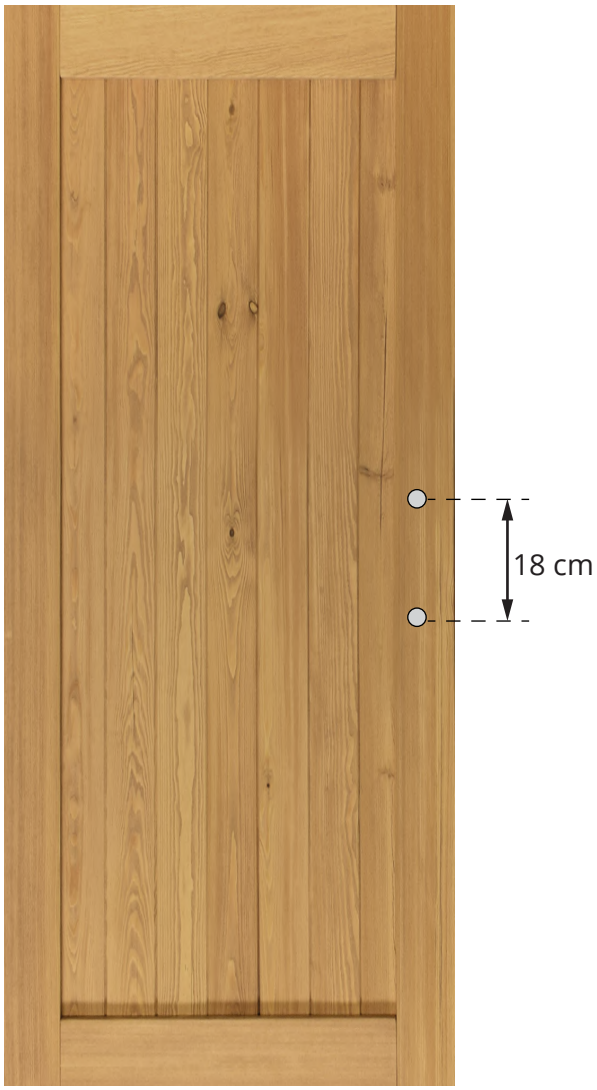

2 DRILL HOLES

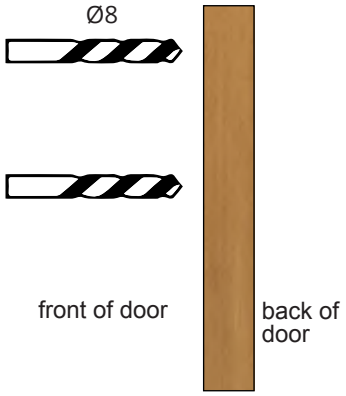

3 INSTALL HANDLES

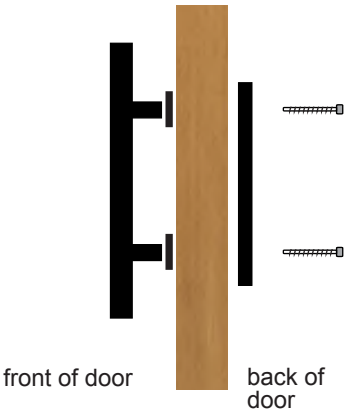



RENO Sp. z o. o.
Warsaw, Poland

support@renodoors.eu

www.renodoors.eu